

🏠 (/xwiki/bin/view/Main/) ▾ / Home (/xwiki/bin/view/Main/) ▾ / User Manual for LoRaWAN End Nodes (/xwiki/bin/view/Main/User%20Manual%20for%20LoRaWAN%20End%20Nodes/) ▾ / LCC01-LB -- LoRaWAN Load Cell Converter User Manual (/xwiki/bin/view/Main/User%20Manual%20for%20LoRaWAN%20End%20Nodes/LCC01-LB_LoRaWAN_Load_Cell_Converter_User_Manual/) ▾

LCC01-LB -- LoRaWAN Load Cell Converter User Manual

Last modified by Bei Jinggeng (/xwiki/bin/view/XWiki/Bei) on 2024/01/29 11:12



Table of Contents:

- 1. Introduction
 - 1.1 What is LoRaWAN Load Cell Converter
 - 1.2 Features
 - 1.3 Specification
 - 1.4 Applications
 - 1.5 Sleep mode and working mode
 - 1.6 Button & LEDs
 - 1.7 BLE connection
 - 1.8 Mechanical
 - 1.9 Installation
 - 1.9.1 Connect Load Cell to LCC01
 - 1.10 Calibrate LCC01 to different scale Load Cells
 - 1.10.1 Configure Utility & Download
 - 1.10.2 Hardware Wiring and User Interface
 - 1.10.3 Calibrate Steps
- 2. Configure LCC01-LB to connect to LoRaWAN network
 - 2.1 How it works
 - 2.2 Quick guide to connect to LoRaWAN server (OTAA)
 - 2.3 Uplink Payload
 - 2.3.1 Device Status, FPORT=5
 - 2.3.2 Sensor Data. FPORT=2
 - Battery Info
 - Weight Reading
 - Sensor State
 - Scale Factor
 - Weight Flag
 - 2.4 Payload Decoder file
 - 2.5 Frequency Plans
- 3. Configure LCC01-LB
 - 3.1 Configure Methods
 - 3.2 General Commands

- 3.3 Commands special design for LCC01-LB
 - 3.3.1 Set Transmit Interval Time
 - 3.3.2 Get Device Status
 - 3.3.3 Set Interrupt Mode
 - 3.3.4 Get Current Object Weight
 - 3.3.5 Set Zero Calibration
 - 3.3.6 Set Weight Calibration
 - 3.3.7 Set Filter
 - 3.3.8 Set Tare
 - 3.3.9 Set Threshold
- 4. Battery & Power Consumption
- 5. OTA Firmware update
- 6. FAQ
- 7. Order Info
- 8. Packing Info
- 9. Support

1. Introduction

1.1 What is LoRaWAN Load Cell Converter

Dragino LCC01-LB is a **LoRaWAN Load Cell Converter** for IoT solutions. It is used to accurately **measure the weight of objects** and then upload it to the IoT server through the LoRaWAN wireless protocol.

The LCC01-LB has a **standard 4-wire interface** which can connect to different types of load cells. It supports **different scaling from gram to ton**.

With LCC01-LB and a suitable load cell, user can build up a weight measurement IoT solution. Applications are suitable for such as: truck scales, railway scales, supermarket scales, bench scales, heavy duty scales or any type of standard scale.

The LoRa wireless technology used in the LCC01-LB allows the device to send data at low data rates and reach extremely long distances. It provides ultra-long-distance spread spectrum communications and high interference immunity while minimizing current consumption.

LCC01-LB **supports BLE configure** and **wireless OTA update** which make user easy to use.

LCC01-LB is powered by **8500mAh Li-SOCI2 battery**, which can last up to 5 years of long-term use.

Each LCC01-LB is pre-load with a set of unique keys for LoRaWAN registrations, register these keys to LoRaWAN server and it will auto connect after power on.

1.2 Features

- LoRaWAN 1.0.3 Class A
- Ultra-low power consumption
- Bands: CN470/EU433/KR920/US915/EU868/AS923/AU915/IN865
- Standard 4-wire interface to 3rd party load cell
- Weigh Measurement, scale from 100g to 10T
- Support Bluetooth v5.1 and LoRaWAN remote configure
- Support wireless OTA update firmware
- Uplink on periodically
- Downlink to change configure
- 8500mAh Li/SOCI2 Battery

1.3 Specification

Common DC Characteristics:

- Supply Voltage: Built-in Battery, 2.5v ~ 3.6v
- Operating Temperature: -40 ~ 85°C

LoRa Spec:

- Frequency Range, Band 1 (HF): 862 ~ 1020 Mhz
- Max +22 dBm constant RF output vs.
- RX sensitivity: down to -139 dBm.
- Excellent blocking immunity

Battery:

- Li/SOCI2 un-chargeable battery
- Capacity: 8500mAh
- Self-Discharge: <1% / Year @ 25°C
- Max continuously current: 130mA
- Max boost current: 2A, 1 second

Power Consumption

- Sleep Mode: 5uA @ 3.3v
- LoRa Transmit Mode: 125mA @ 20dBm, 82mA @ 14dBm

1.4 Applications

Weight Measurements



Bending Beam Load Cell



Compression Load Cell



Type Load Cell



Canister load cell



Hopper Weighing



Weighbridge



Test Machine



Truck Scales



Packing Machine



Tank Silo Weighing



Crane Scales




Railroad Scales

1.5 Sleep mode and working mode

Deep Sleep Mode: Sensor doesn't have any LoRaWAN activate. This mode is used for storage and shipping to save battery life.

Working Mode: In this mode, Sensor will work as LoRaWAN Sensor to Join LoRaWAN network and send out sensor data to server. Between each sampling/tx/rx period sensor will be in IDLE mode, in IDLE mode, sensor has the same power consumption as Deep Sleep mode.

1.6 Button & LEDs

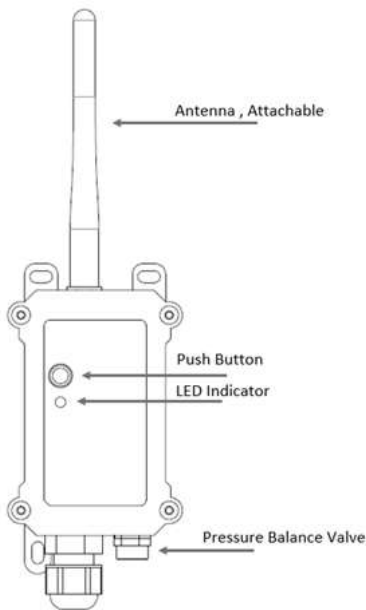

Behavior on ACT	Function	Action
Pressing ACT between 1s < time < 3s	Send an uplink	If sensor is already Joined to LoRaWAN network, sensor will send an uplink packet, blue led will blink once. Meanwhile, BLE module will be active and user can connect via BLE to configure device.

Pressing ACT for more than 3s	Active Device	<p>Green led will fast blink 5 times, device will enter OTA mode for 3 seconds. And then start to JOIN LoRaWAN network.</p> <p>Green led will solidly turn on for 5 seconds after joined in network.</p> <p>Once sensor is active, BLE module will be active and user can connect via BLE to configure device, no matter if device join or not join LoRaWAN network.</p>
Fast press ACT 5 times.	Deactivate Device	<p>Red led will solid on for 5 seconds. Means device is in Deep Sleep Mode.</p>

1.7 BLE connection


LCC01-LB supports BLE remote configure.

BLE can be used to configure the parameter of LCC01 or see the console output from LCC01. BLE will be only activate on below case:

- Press button to send an uplink
- Press button to active device.
- Device Power on or reset.

If there is no activity connection on BLE in 60 seconds, LCC01 will shut down BLE module to enter low power mode.

1.8 Mechanical

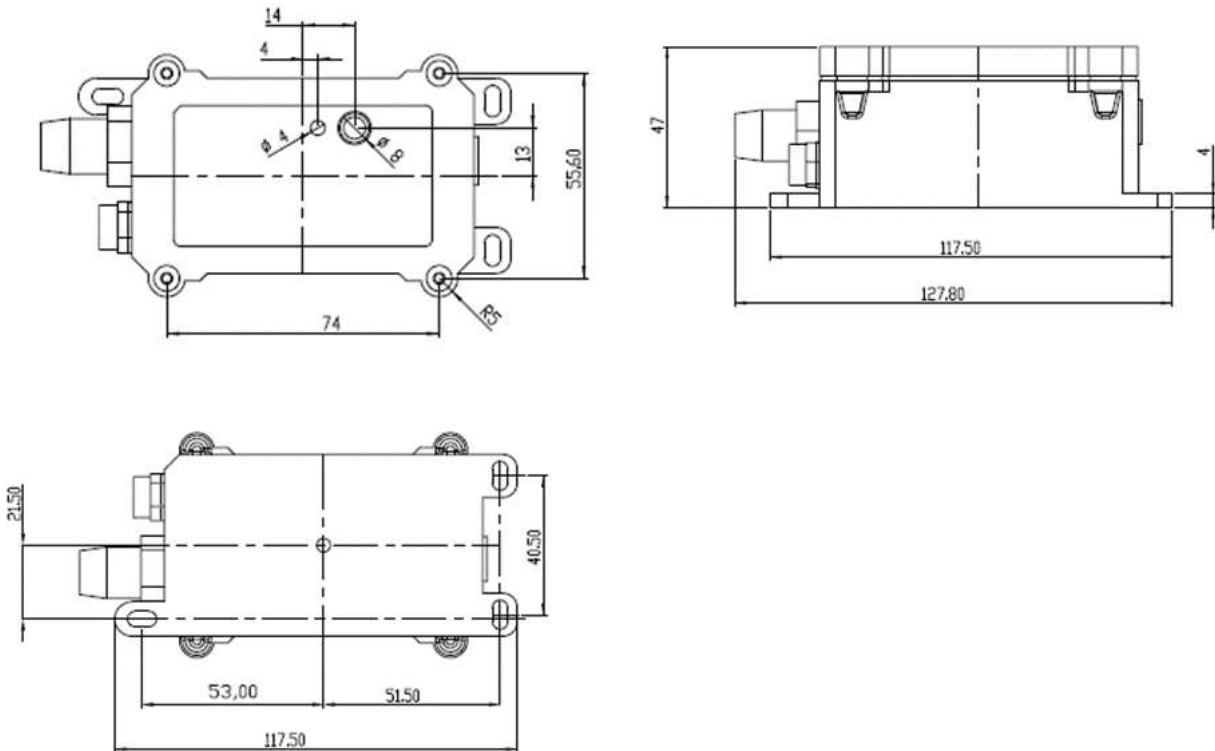


1.9 Installation

LCC01 doesn't include load cell, user need to find the suitable load cell for their application and connect to LCC01.

1.9.1 Connect Load Cell to LCC01

Load Cell normally has four wires: S+,S-, E+,E-, Below are the pin mapping to LCC01. The other four wires (EXT,GND,3.3v,5v) are for extra features , which is not used if of case.

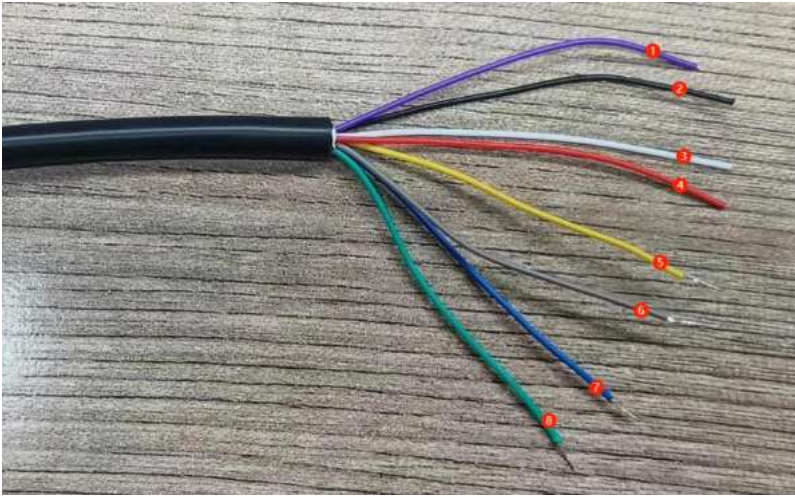


Wire color	Sensor pin	Function
purple(1)	EXT_ Input	Interrupt trigger pin (Input)
black(2)	GND	External power supply GND
white(3)	VCC-3.3V	Used for interrupt triggering or External Power Supply
red(4)	+5V Out	+5v Power Output
yellow(5)	Load Cell (S+)	Load Cell Signal +
gray(6)	Load Cell (E-)	Load Cell Excitation -
blue(7)	Load Cell (E+)	Load Cell Excitation +
green(8)	Load Cell (S-)	Load Cell Signal -


The package box of LCC01 has four Solder Seal Sleeves which for the easy connect the Load Cell to LCC01, Below shows how to connect wires:



1. Peel the wire jacket off used by the wire stripper.

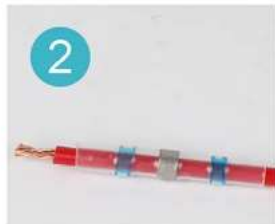

2. Insert the wire into the connector.

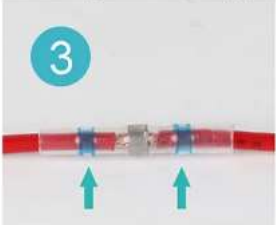

3. Tighten the wires and move them to the center of the tube.

(Do not exceed the position colored on both ends.)



4. Heat the shrinkable tube by lighter or a heat gun.

1.10 Calibrate LCC01 to different scale Load Cells


1.10.1 Configure Utility & Download

Calibrate is necessary when connecting LCC01 and a Load Cell. The Load Cell Configure Tool is used to calibrate the LCC01 to match different scales of Load Cells and provide the proper output.


Download Link (<https://www.dropbox.com/scl/fo/qy2ghw6ytl8yoyp2n1xdc/h?rlkey=6sr4kdn5y7y6yn5xe9n7q8a4f&dl=0>) . (Support Windows OS only)

1.10.2 Hardware Wiring and User Interface


Connect LCC01 to PC using USB to TTL Adapter.

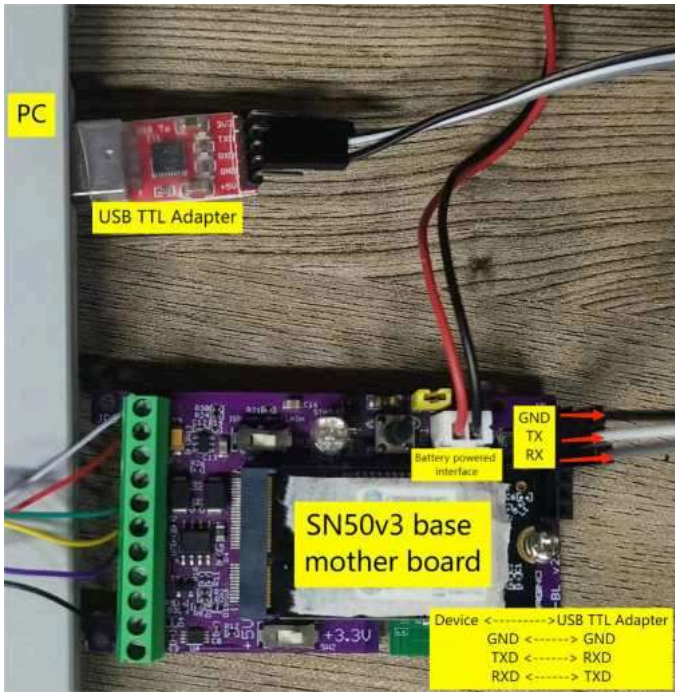


Utility Interface

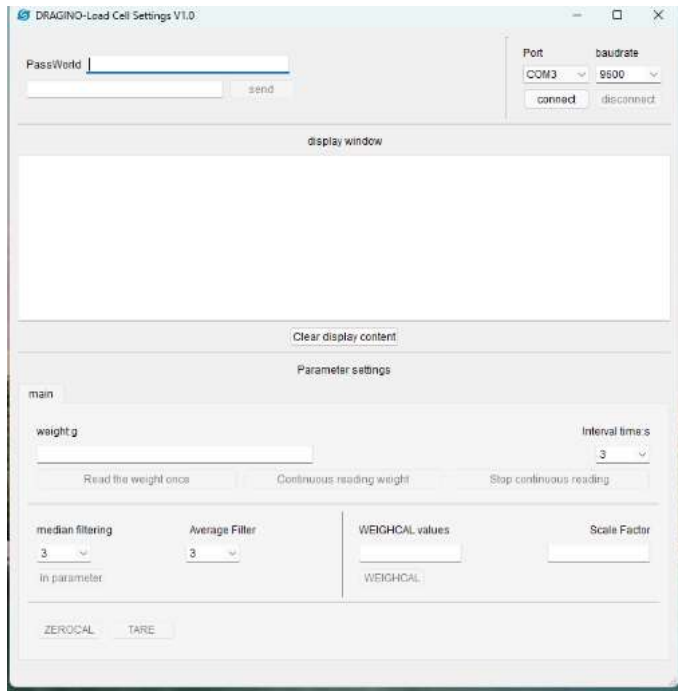


Detailed instructions for use

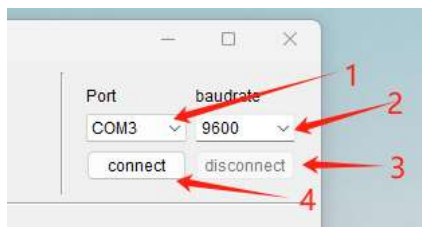

1. Choose the correct COM port for USB TTL
2. USB TTL Baud Rate: 9600
3. & 4. Connect / Disconnect COM port

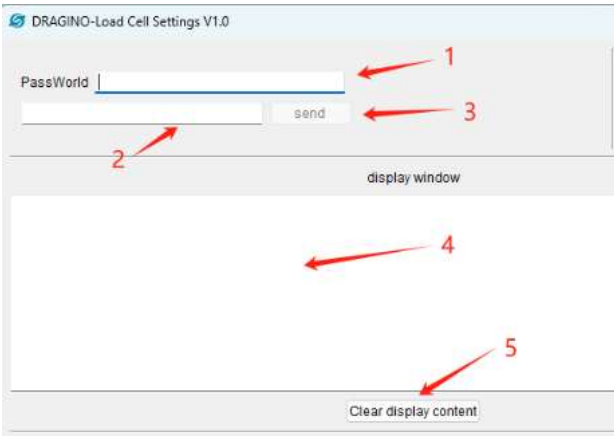


1. AT Password for accessing LCC01 UART
2. AT Command Input Box
3. Send an AT Command
4. Output for LCC01 UART interface
5. Clear Output

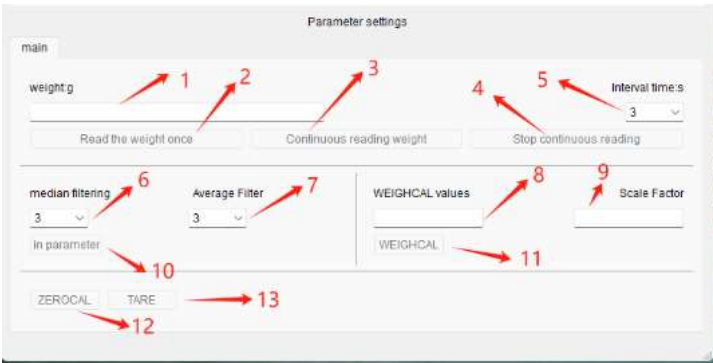


1. Shows the value obtained by **Read the weight once button** or **Continuous reading weight button**
2. Read the weight once
3. Continuous reading weight button
4. Stop continuous reading button
5. Time interval for continuous weight reading drop-down box
6. Drop-down box for median filtering (recommended to use default values)
7. Drop-down box for average filtering(Please do not input manually for less than 3 seconds)
8. Weight input box (Use for Weight Calibrate)
9. Scale Factor --> Set different Scale.
10. Write median filtering and average filtering parameters button
11. Button for writing weight parameters and Scale Factor
12. ZERO CAL: Zero Calibration
13. TARE: zero-setting and tare button
14. More use see below example.

Use of programs

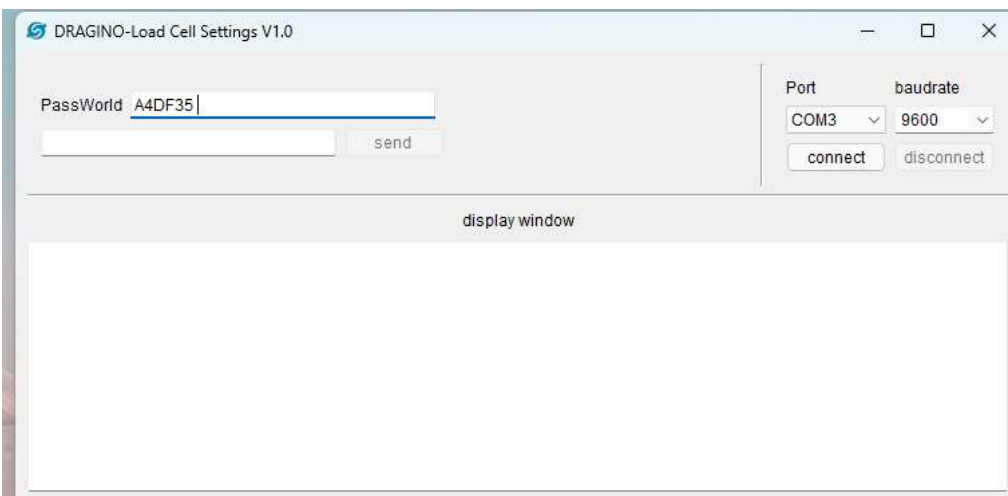

Then select the corresponding COM port and baud rate. If only one USB-TTL serial port is inserted into the computer, the default program settings can be used directly. The following screen is the default configuration:

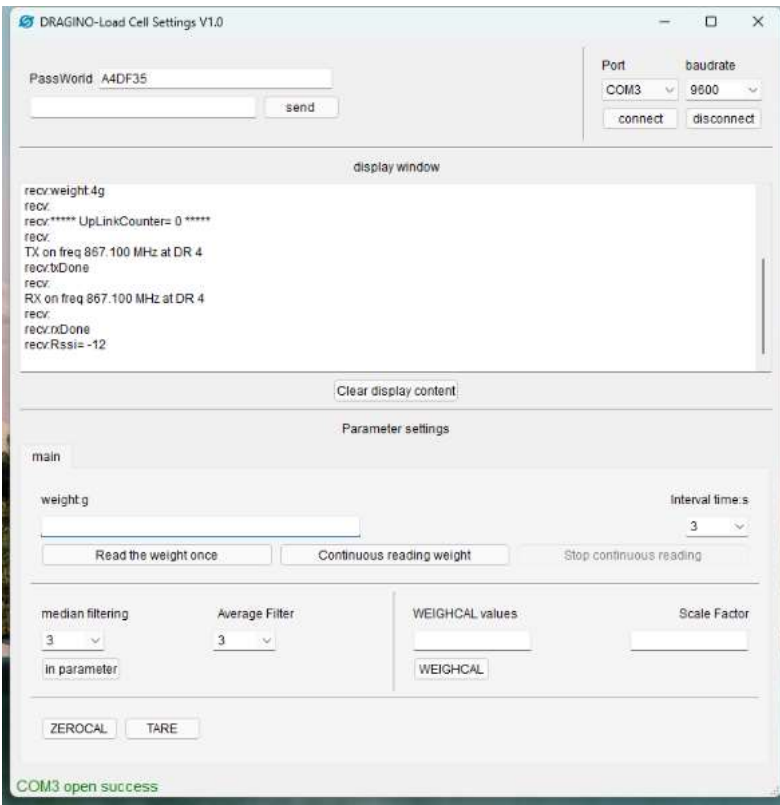


Finally, select the values according to the desired settings or click the button.

Please note that only after entering the password and connecting to the serial port will other buttons be available.

1.10.3 Calibrate Steps

Step1: Zero Calibration


Set the required weight to 0 (normally no objects are placed on the weighing scale) and click the ZEROCAL button

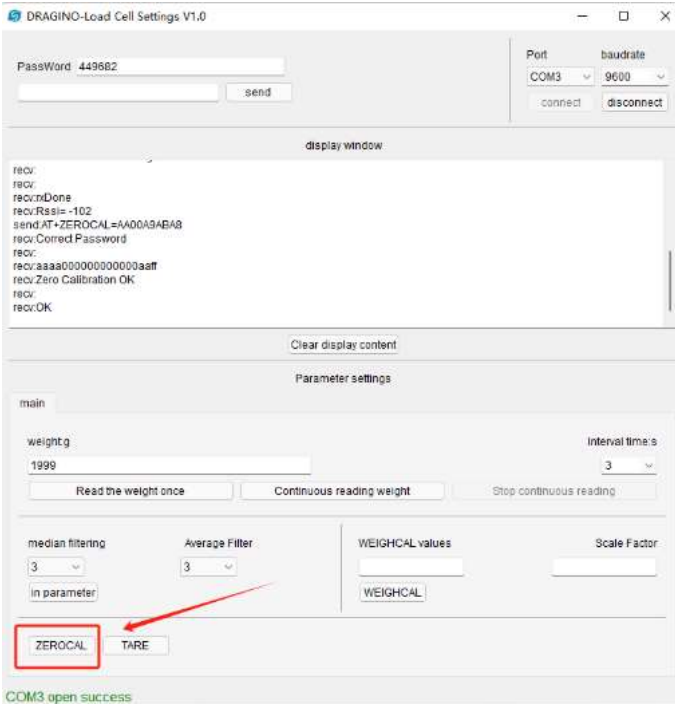

Step2: Determine Scale Factor

Enter Scale Factor according to requirements. The weight reading range is 0~65535(g). If user want to Calibate to a high scale for example 1T, he should set the scale factor For example,

- If the load cell range is 0~50kg, Use 1 as scale factor
- If the load cell range is 0~500kg, use 10 as scale factor. the reading range = Weight Reading x Scale Factor = 0 ~ 655350g (655.35kg)

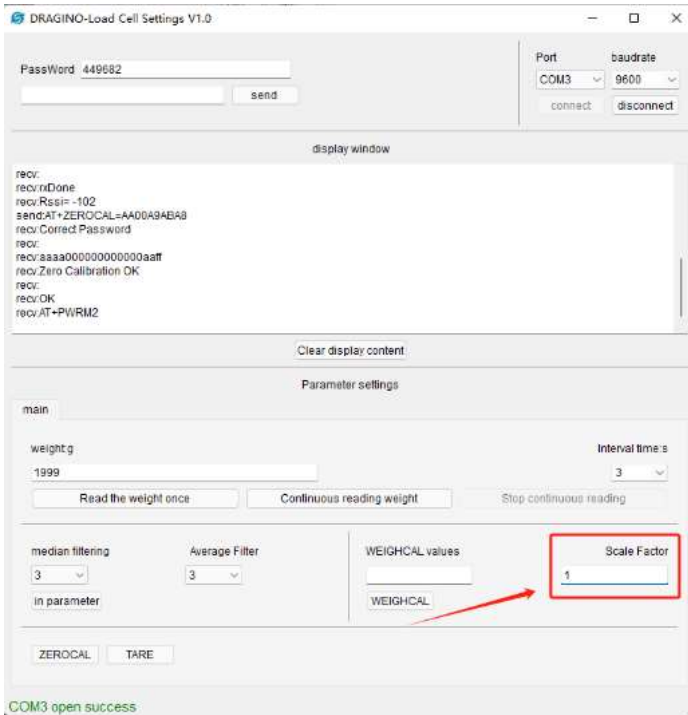


Step3: Weight Calibration

Place an object of known weight on the weighing scale, enter the weight value of the object, and then click the "WEIGHTCAL" button


When the calibration is completed, Calibrate the Weight Reading to XXXXg OK will be output on the serial port.

Notice: The best is use a weight close the max range of Load Cell to calibrate

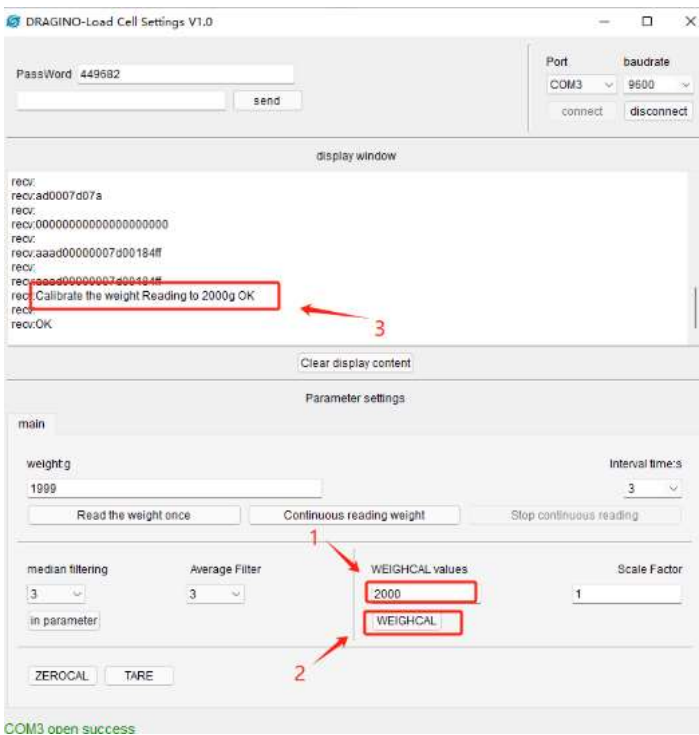

Step4: Verify Weight

Replace other items with known weights and click the "Read the weight once" button to check whether the calibration is completed.

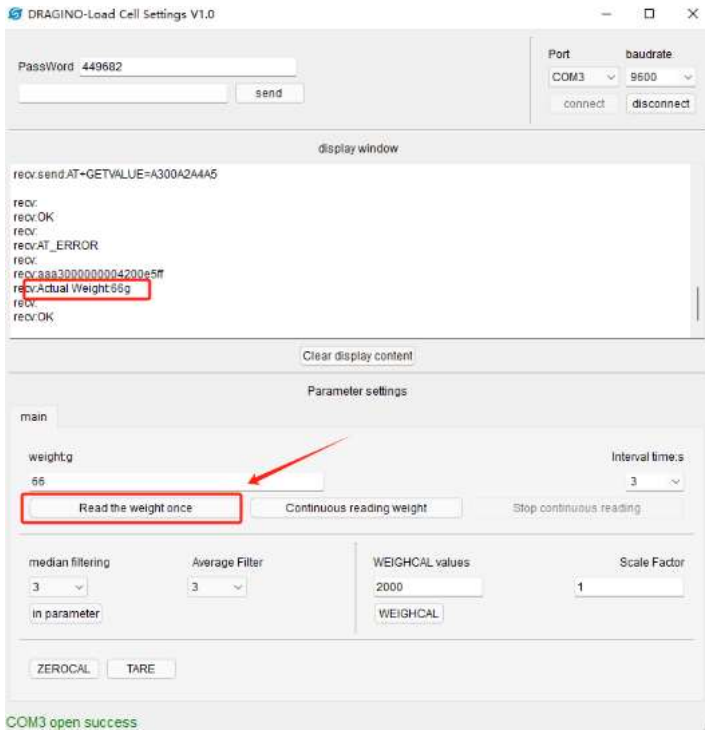

2. Configure LCC01-LB to connect to LoRaWAN network

2.1 How it works


The LCC01-LB is configured as **LoRaWAN OTAA Class A** mode by default. It has OTAA keys to join LoRaWAN network. To connect a local LoRaWAN network, you need input the OTAA keys in the LoRaWAN IoT server and press the button to activate the LCC01-LB. It will automatically join the network via OTAA and start to send the sensu value. The default uplink interval is 20 minutes.

2.2 Quick guide to connect to LoRaWAN server (OTAA)

Following is an example for how to join the TTN v3 LoRaWAN Network (<https://console.cloud.thethings.network/>) . Below is the network structure; we use the LPS8v2 (<https://www.dragino.com/products/lora-lorawan-gateway/item/228-lps8v2.html>) as a LoRaWAN gateway in this example.

The LPS8V2 is already set to connected to TTN network (<https://console.cloud.thethings.network/>) , so what we need to now is configure the TTN server.

LCC01-LB in a LoRaWAN Network

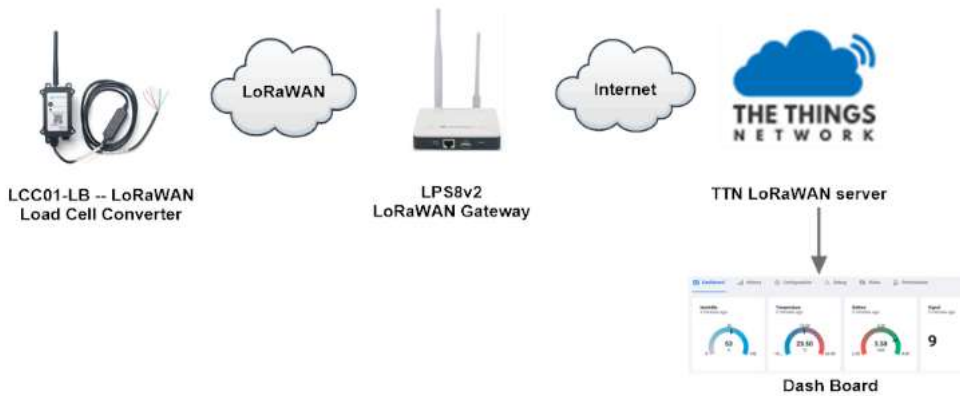

Step 1: Create a device in TTN with the OTAA keys from LCC01-LB.

Each LCC01-LB is shipped with a sticker with the default device EUI as below:



You can enter this key in the LoRaWAN Server portal. Below is TTN screen shot:

Register the device

Register end device

From The LoRaWAN Device Repository [Manually](#)

Preparation

Activation mode *

- Over the air activation (OTAA)
- Activation by personalization (ABP)
- Multicast
- Do not configure activation

LoRaWAN version ⓘ *

MAC V1.0.3 1

Network Server address
eu1.cloud.thethings.network

Application Server address
eu1.cloud.thethings.network

External Join Server ⓘ

Enabled

Join Server address
eu1.cloud.thethings.network

Start 2

Add APP EUI and DEV EUI

Register end device

From The LoRaWAN Device Repository **Manually**

- 1 **Basic settings**
End device ID's, Name and Description
- 2 **Network layer settings**
Frequency plan, regional parameters, end device class and session keys.
- 3 **Join settings**
Root keys, NetID and kek labels.

End device ID [?] *
lsnpk01

AppEUI [?] *
.. .. . 00

DevEUI [?] *
.. .. .

End device name
LSNPK01

End device description
Description for my new end device

Optional end device description; can also be used to save notes about the end device

[Network layer settings >](#)

Add APP EUI in the application

Register end device

From The LoRaWAN Device Repository **Manually**

- ✓ **Basic settings**
End device ID's, Name and Description
- 2 **Network layer settings**
Frequency plan, regional parameters, end device class and session keys.
- 3 **Join settings**
Root keys, NetID and kek labels.

Frequency plan [?] *
Europe 863-870 MHz (SF12 for RX2)

LoRaWAN version [?] *
MAC V1.0.3

Regional Parameters version [?] *
PHY V1.0.3 REVA

LoRaWAN class capabilities [?]
 Supports class B
 Supports class C


Advanced settings [?] v

[< Basic settings](#)

[Join settings >](#)

Add APP KEY

Register end device

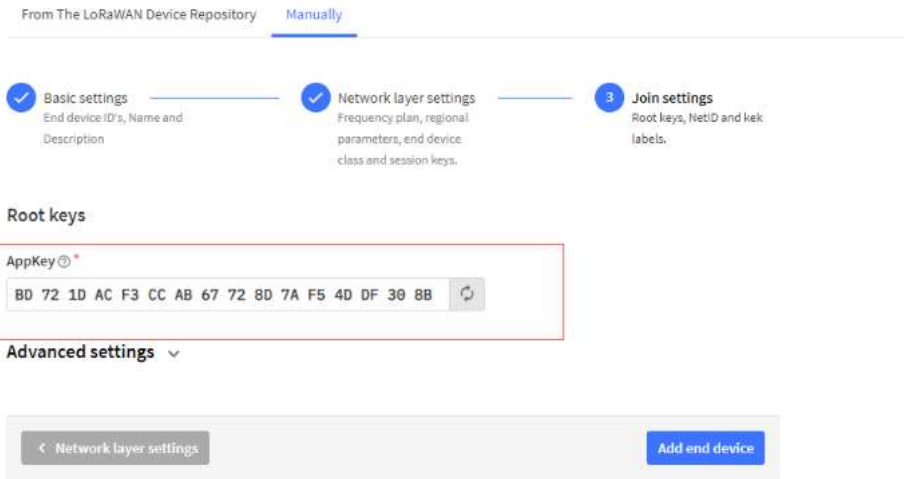

Step 2: Activate on LCC01-LB

Press the button for 5 seconds to activate the LCC01-LB.

Green led will fast blink 5 times, device will enter **OTA mode** for 3 seconds. And then start to JOIN LoRaWAN network. **Green led** will solidly turn on for 5 seconds after join in network.

After join success, it will start to upload messages to TTN and you can see the messages in the panel.

2.3 Uplink Payload

2.3.1 Device Status, FPORT=5

Users can use the downlink command(0x26 01) to ask Load Cell Converter(LCC) to send device configure detail, include device configure status. LCC will uplink a payload FPort=5 to server.

The Payload format is as below.

Device Status (FPORT=5)					
Size (bytes)	1	2	1	1	2
Value	Sensor Model	Firmware Version	Frequency Band	Sub-band	BAT

Example parse in TTNv3



Sensor Model: For LCC01-LB, this value is 0x32

Firmware Version: 0x0100, Means: v1.0.0 version

Frequency Band:

- 0x01: EU868
- 0x02: US915
- 0x03: IN865
- 0x04: AU915
- 0x05: KZ865
- 0x06: RU864
- 0x07: AS923
- 0x08: AS923-1
- 0x09: AS923-2
- 0x0a: AS923-3

- 0x0b: CN470
- 0x0c: EU433
- 0x0d: KR920
- 0x0e: MA869

Sub-Band:

AU915 and US915:value 0x00 ~ 0x08
 CN470: value 0x0B ~ 0x0C
 Other Bands: Always 0x00

Battery Info:

Check the battery voltage.
 Ex1: 0x0B45 = 2885mV
 Ex2: 0x0B49 = 2889mV

2.3.2 Sensor Data. FPORT=2

MOD=1(Collect current object weight regularly.)

Uplink Payload totals 9 bytes.

Size(bytes)	2	1	3	1	2
Value	BAT	MOD	Weight Reading	Sensor State	Scale Factor



Battery Info

Check the battery voltage for LCC01-LB.
 Ex1: 0x0E10 = 3600mV

Weight Reading

Example:

If payload is: 0x00002322H: weight Reading = 2322H = 8994 & Actually weight is 8994 x Scale Factor (g)

Sensor State

Ex1: 0x00=8994g
 Ex2: 0x01= - 8994g

Scale Factor

The **Weight Reading** x **Scale Factor** determine the actual weight. Default Scale Factor is 1g(gram)

Example:

Weight Info	Scale Factor	Actual Weight
8994	1	8994 x 1g = 8994g = 8.994Kg
8994	10	8994 x 10g = 89940g = 89.94Kg
8994	255	8994 x 255 = 2293470g = 2293.47kg = 2.29347T

MOD=2(Collect the weight of objects all the time, and send the current weight if it exceeds the set threshold.)

Uplink Payload totals 10 bytes.

This mode is combined with AT+THRESHOLD=weight,Scale Factor.

Size(bytes)	2	1	3	1	2	1
Value	BAT	MOD	Weight Reading	Sensor State	Scale Factor	Weight Flag



Weight Flag

This flag indicates whether the object is always weighed.

0: It means that the object is not weighed repeatedly,

1: It means that the object has been weighed

2.4 Payload Decoder file

In TTN, use can add a custom payload so it shows friendly reading

In the page **Applications --> Payload Formats --> Custom --> decoder** to add the decoder from:

dragino-end-node-decoder/LCC01-LB at main · dragino/dragino-end-node-decoder (github.com) (<https://github.com/dragino/dragino-end-node-decoder/tree/main/LCC01-LB>)

2.5 Frequency Plans

The LCC01-LB uses OTAA mode and below frequency plans by default. If user want to use it with different frequency plan, please refer the AT command sets.

<http://wiki.dragino.com/xwiki/bin/view/Main/End%20Device%20Frequency%20Band/> (<http://wiki.dragino.com/xwiki/bin/view/Main/End%20Device%20Frequency%20Band/>)

3. Configure LCC01-LB

3.1 Configure Methods

LCC01-LB supports below configure method:

- AT Command via Bluetooth Connection (**Recommended**): BLE Configure Instruction (<http://wiki.dragino.com/xwiki/bin/view/Main/BLE%20Bluetooth%20Remote%20Configure/>) .
- AT Command via UART Connection : See UART Connection (<http://wiki.dragino.com/xwiki/bin/view/Main/UART%20Access%20for%20LoRa%20ST%20v4%20base%20model/#H2.3UARTConnectionforSN50v3basemotherbo>).
- LoRaWAN Downlink. Instruction for different platforms: See IoT LoRaWAN Server (<http://wiki.dragino.com/xwiki/bin/view/Main/>) section.

3.2 General Commands

These commands are to configure:

- General system settings like: uplink interval.
- LoRaWAN protocol & radio related command.

They are same for all Dragino Devices which support DLWS-005 LoRaWAN Stack. These commands can be found on the wiki:

<http://wiki.dragino.com/xwiki/bin/view/Main/End%20Device%20AT%20Commands%20and%20Downlink%20Command/>
<http://wiki.dragino.com/xwiki/bin/view/Main/End%20Device%20AT%20Commands%20and%20Downlink%20Command/>

3.3 Commands special design for LCC01-LB

These commands only valid for LCC01-LB, as below:

3.3.1 Set Transmit Interval Time

Feature: Change LoRaWAN End Node Transmit Interval.

AT Command: AT+TDC

Command Example	Function	Response
AT+TDC=?	Show current transmit Interval	30000 OK the interval is 30000ms = 30s
AT+TDC=60000	Set Transmit Interval	OK Set transmit interval to 60000ms = 60 seconds

Downlink Command: 0x01

Format: Command Code (0x01) followed by 3 bytes time value.

If the downlink payload=0100003C, it means set the END Node's Transmit Interval to 0x00003C=60(S), while type code is 01.

- Example 1: Downlink Payload: 0100001E // Set Transmit Interval (TDC) = 30 seconds
- Example 2: Downlink Payload: 0100003C // Set Transmit Interval (TDC) = 60 seconds

3.3.2 Get Device Status

Send a LoRaWAN downlink to ask device send Alarm settings.

Downlink Payload: 0x26 01

Sensor will upload Device Status via FPORT=5. See payload section for detail.

3.3.3 Set Interrupt Mode

Feature, Set Interrupt mode for PA8 of pin.

When AT+INTMOD=0 is set, PA8 is used as a digital input port.

AT Command: AT+INTMOD

Command Example	Function	Response
AT+INTMOD=?	Show current interrupt mode	0 OK the mode is 0 =Disable Interrupt
AT+INTMOD=2	Set Transmit Interval 0. (Disable Interrupt), 1. (Trigger by rising and falling edge) 2. (Trigger by falling edge) 3. (Trigger by rising edge)	OK

Downlink Command: 0x06

Format: Command Code (0x06) followed by 3 bytes.

This means that the interrupt mode of the end node is set to 0x000003=3 (rising edge trigger), and the type code is 06.

- Example 1: Downlink Payload: 06000000 // Turn off interrupt mode
- Example 2: Downlink Payload: 06000003 // Set the interrupt mode to rising edge trigger

3.3.4 Get Current Object Weight

AT Command: AT+GETVALUE

Command format: AT+GETVALUE=A300A2A4A5

Return data format:

Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	Byte9	Byte10
0xAA	0xA3	0x00	0x00	0x00	0x23	0x22	0x00	0xE8	0xFF

Example:

Ex1:

Accepted: AA A3 00 00 23 22 00 E8 FF

Weight=00*65535+23*256+22=8994, Byte4 is 0, which means positive, and the weight is 8994

Ex2:

Accepted: AA A3 00 01 23 22 00 E8 FF

Weight t=00*65535+23*256+22=8994, Byte4 is 1, which means negative, and the weight t is -8994

If a negative number appears, it may be that the 0 point has not been calibrated properly. Just follow the calibration process again.

If after recalibration, after placing the object, it was originally 100, but the result shows -100, this situation is caused by the sensor signal line being connected incorrectly, or pressure sensor being installed incorrectly.

Final weight obtained: Weight x Scale Factor

Output:

Weight Reading= 8994; Scale Factor= 1

Actual Weight= 8994(g)

3.3.5 Set Zero Calibration

AT Command: AT+ZEROCAL

Command format: AT+ZEROCAL=AA00A9ABA8

Return success and output Zero Calibration OK. If unsuccessful, return the result and Fail.

3.3.6 Set Weight Calibration

AT Command: AT+WEIGHCAL

AT+WEIGHCAL=1000,1

Calibrate the Weight Reading to 1000 (0x03E8).

Scale Factor to 1(0x01)

Return:

Calibrate the weight Reading to 1000g, OK?

3.3.7 Set Filter

AT Command: AT+FILTER

Command format: AT+FILTER=03,03

Send command format description:

Data1: Median filter range: 1, 3, 5, 7, 9

Data2: Average filter range: 1~50

Return success and output Median filter, average filter settings OK. If unsuccessful, return the result and Fail.

3.3.8 Set Tare

AT Command: AT+TARE

Command format: AT+TARE=AB00AAACAD

Return success and output Tare (set to zero, temporarily cleared) OK.

3.3.9 Set Threshold

Feature, when the weighing exceeds the set value, the current weight will be sent immediately

AT Command: AT+THRESHOLD

Command format: AT+THRESHOLD=1000,1

Send command format description:

Data1: weight

Data2: Scale Factor

4. Battery & Power Consumption

LCC01-LB use ER26500 + SPC1520 battery pack . See below link for detail information about the battery info and how to replace.

Battery Info & Power Consumption Analyze

(<http://wiki.dragino.com/xwiki/bin/view/Main/How%20to%20calculate%20the%20battery%20life%20of%20Dragino%20sensors%3F/>)

5. OTA Firmware update

User can change firmware LCC01-LB to:

- Change Frequency band/ region.
- Update with new features.
- Fix bugs.

Firmware and changelog can be downloaded from : **Firmware download link** (<https://www.dropbox.com/scl/fo/3p5c6x13o0z23q3bupf88/h?rlkey=gvrvpf4x51lwng0ih13kn6wfl&dl=0>)

Methods to Update Firmware:

- (Recommended way) OTA firmware update via wireless : <http://wiki.dragino.com/xwiki/bin/view/Main/Firmware%20OTA%20Update%20for%20Sensors/> (<http://wiki.dragino.com/xwiki/bin/view/Main/Firmware%20OTA%20Update%20for%20Sensors/>)
- Update through UART TTL interface : **Instruction** (<http://wiki.dragino.com/xwiki/bin/view/Main/UART%20Access%20for%20LoRa%20ST%20v4%20base%20model/#H1.LoRaSTv4baseHardware>)

6. FAQ

7. Order Info

Part Number: **LCC01-LB-XX**

XX: The default frequency band

- **AS923:** LoRaWAN AS923 band
- **AU915:** LoRaWAN AU915 band
- **EU433:** LoRaWAN EU433 band
- **EU868:** LoRaWAN EU868 band
- **KR920:** LoRaWAN KR920 band
- **US915:** LoRaWAN US915 band
- **IN865:** LoRaWAN IN865 band
- **CN470:** LoRaWAN CN470 band

8. Packing Info

Package Includes:

- LCC01-LB LoRaWAN Load Cell Converter x 1

Dimension and weight:

- Device Size: cm
- Device Weight: g
- Package Size / pcs : cm
- Weight / pcs : g

9. Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different timezones we cannot offer live support. However, your questions will be answer soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to Support@dragino.cc (<mailto:Support@dragino.cc>)



Tags:

Created by Xiaoling ([/xwiki/bin/view/XWiki/Xiaoling](http://wiki.dragino.com/xwiki/bin/view/XWiki/Xiaoling)) on 2024/01/08 11:51

No comments for this page