 


Multiple Charging Base Station LT-C100 User Guide

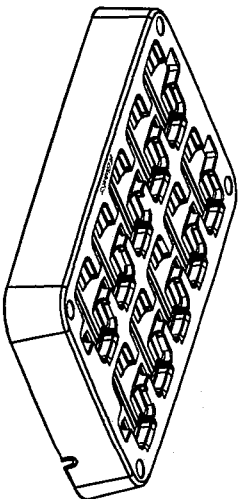



GlobalSat WorldCom Corporation
16F, No. 186, Jian 1st Rd, Zhonghe Dist.,
New Taipei City 23553, Taiwan
Tel: 886 2 8226 3799 / Fax: 886 2 8226 3699
sales@globalSAT.com.tw
www.globalSAT.com.tw

USGlobalSat Incorporated
14740 Yorba Court China, CA 91710
Tel: 888 323 8720 / Fax: 909 597 8532
sales@usglobalSAT.com
www.usglobalSAT.com



PACKAGE CONTENTS


Multiple Charging Base Station
356*206*45mm
1035g

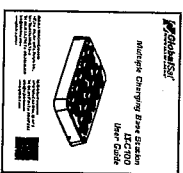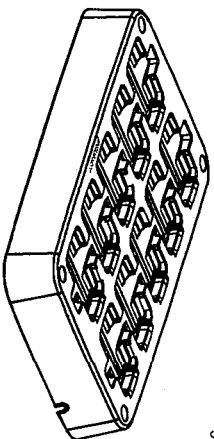

User Guide

AC Adaptor (without Power Cord)

125 *50*31.5mm
305g
Output : 5V \equiv 6.0A, 30W MAX.
Input : 100-240VAC, 50/60Hz, 1.4A

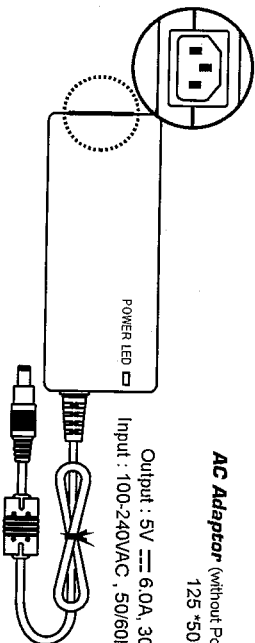


You will also need:

Power Cord:
For connecting to the adaptor of the Multiple Charging Station LT-C100

01


4. Plug the power cord into a working electrical outlet

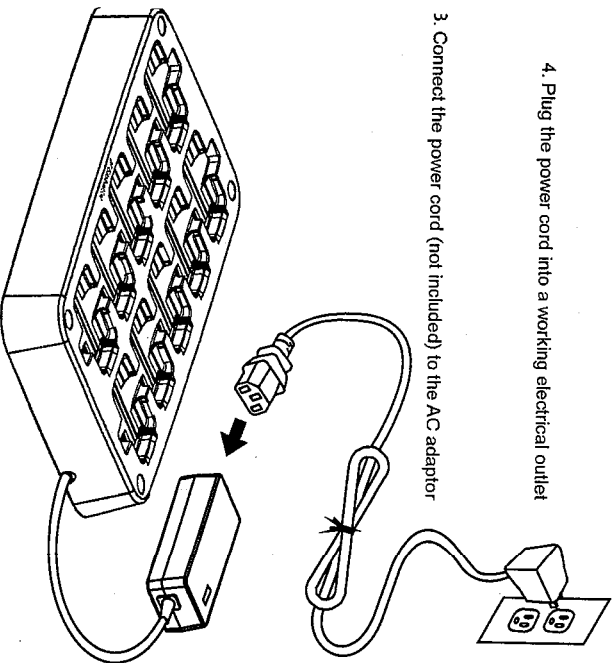


3. Connect the power cord (not included) to the AC adaptor

Quick Setup

1. Open back cover from the bottom of the Multiple Charging Base Station LT-C100

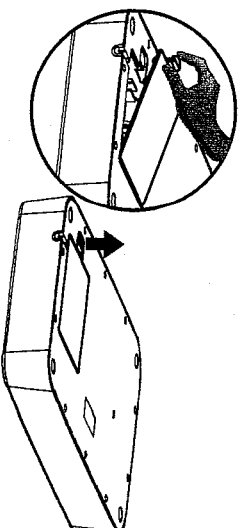

2. Insert the AC adaptor DC plug into the DC IN 5V jack

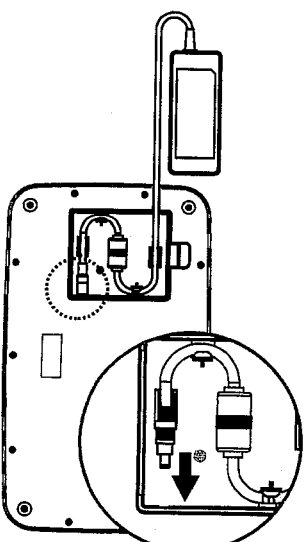


LT-100/ LT-200 LED Indicators

Power Status LED \downarrow

| LED State | Orange Constantly Lit | Orange Blinking | Red Constantly Lit | Red Blinking quickly |
|---------------------------------|-----------------------|-----------------|--------------------|----------------------|
| LT-100/ LT-200 is fully charged | Charging | Charging | Charging | Charging |

Power LED

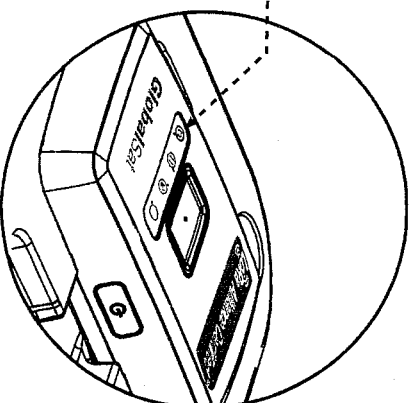

Do not immerse or expose the Multiple Charging Base Station to water