

# Core features and benefits of The Things Indoor Gateway Pro

Setup guide: **1** Connect to power, **2** Connect to internet, **3** Configure server address, **4** Register in TTS, **5** Set up monitoring.



## Zero-Touch Provisioning

Simplifies deployment and setup, enabling quick and easy installation without the need for technical expertise.



## Enhanced Device Management

Includes features such as mTLS, FOTA, remote reboot, spectral scan, and smarter filtering capabilities.



## Fully Cloud-Managed

Offers comprehensive remote management capabilities, including firmware updates, device monitoring, and real-time insights.



## Future-Proof Technology

Simplifies deployment and setup, enabling quick and easy installation without the need for technical expertise.



## Cellular Data Included

Roaming SIM card with data included in the subscription, WiFi and ethernet available.



## Integrated with The Things Stack

Cloud, Sandbox, Enterprise and Open Source.

## Technical specification

### LoRa®

Antenna	1 x External Antenna
Concentrator	SX1302, 8 Channels (Half-duplex)
Frequency Band	EU868 / US915
Sensitivity	-140 dBm Sensitivity at SF12
Output Power	Up to 27 dBm

### Ethernet Interface

Port	1 x RJ45 WAN Port
Physical Layer	10/100 Base-T (IEEE 802.3)
Data Rate	10/100 Mbps (Auto-Sensing)
Interface	Auto MDI/MDIX
Mode	Full or Half Duplex (Auto-Sensing)

### Wi-Fi

Standards	IEEE 802.11 b/g/n, 2.4 GHz
-----------	----------------------------

### Cellular Interface

Network	4G LTE (Cat 1 bis) / GSM
Antenna	1 x External Antenna
SIM Slot	1 (Micro SIM-3FF)

### Others

Button	1 x Reset Button
Console Port	1 x USB 2.0 (Type-C) for Power Supply and Console
LED Indicators	1 x Controller, 1 x The Things Stack

### Power Supply and Consumption

Power Input	1. 5V via USB Type-C Port 2. 5~12V DC via 3.5mm 2-pin Terminal Block
-------------	---