

Wireless Soil Moisture/ Temperature/Electrical Conductivity Sensor

R718PB15A User Manual

Copyright©Netvox Technology Co., Ltd.

This document contains proprietary technical information which is the property of NETVOX Technology. It shall be maintained in strict confidence and shall not be disclosed to other parties, in whole or in part, without written permission of NETVOX Technology. The specifications are subject to change without prior notice.

Table of Content

1. Introduction	2
2. Appearance	2
3. Main Characteristic	3
4. Set Up Instruction	4
5. Data Report	5
6. Installation.....	6
7. Information about Battery Passivation	8
7.1 To determine whether a battery requires activation	8
7.2 How to activate the battery	8
8. Important Maintenance Instruction.....	9

1. Introduction

R718PB15A is a Class A device based on the LoRaWAN open protocol of Netvox and is compatible with LoRaWAN protocol. It will send the value of soil moisture, temperature, electrical conductivity to the corresponding gateway.

LoRa Wireless Technology:

LoRa is a wireless communication technology dedicated to long distance and low power consumption. Compared with other communication methods, LoRa spread spectrum modulation method greatly increases to expand the communication distance. Widely used in long-distance, low-data wireless communications. For example, automatic meter reading, building automation equipment, wireless security systems, industrial monitoring. Main features include small size, low power consumption, transmission distance, anti-interference ability and so on.

LoRaWAN:

LoRaWAN uses LoRa technology to define end-to-end standard specifications to ensure interoperability between devices and gateways from different manufacturers.



2. Appearance



3. Main Characteristic

- Using SX1276 wireless communication module
- 2 ER14505 batteries AA SIZE (3.6V / cell) power supply in parallel
- Host protection level IP67
- Soil moisture detection
- Soil temperature detection
- Soil electrical conductivity
- Compatible with LoRaWAN™ Class A
- Frequency hopping spread spectrum technology
- Configurable parameters via third-party software platform, reading data and setting alarms via SMS text and email (optional)
- Applicable to third-party platforms: Actility / ThingPark, TTN, MyDevices / Cayenn
- The product has low power consumption and supports longer battery life.

Note *:

The battery life is determined by the frequency and other variables reported by the sensor.

Please refer to http://www.netvox.com.tw/electric/electric_calc.html

On the website, users can find various models of battery life in different configurations

4. Set Up Instruction

On/Off

Power on	Insert batteries. (users may need a screwdriver to open)
Turn on	Press and hold the function key for 3 seconds till the green indicator flashes once.
Turn off (Restore to factory setting)	Press and hold the function key for 5 seconds and the green indicator flashes 20 times.
Power off	Remove batteries
Note	<ol style="list-style-type: none"> 1. For the first 5 seconds after power on, the device will be in engineering test mode. 2. Remove and insert the battery; the device is at off state by default. Turn on the device to use again. 3. On/off interval is suggested to be about 10 seconds to avoid the interference of capacitor inductance and other energy storage components.

Network Joining

Never joined the network	<p>Turn on the device to search the network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Had joined the network (not restore to factory setting)	<p>Turn on the device to search the previous network to join.</p> <p>The green indicator stays on for 5 seconds: success</p> <p>The green indicator remains off: fail</p>
Fail to join the network	Suggest to check the device verification information on the gateway or consult your platform server provider.

Function Key

Press and hold for 5 seconds	<p>Restore to factory setting / Turn off</p> <p>The green indicator flashes 20 times: success</p> <p>The green indicator remains off: fail</p>
Press once	<p>The device is in the network: The green indicator flashes once and sends a data report</p> <p>The device is not in the network: The green indicator remains off</p>

Sleeping Mode

The device is on and in the network	<p>Sleeping period: Min Interval.</p> <p>When the reportchange exceeds setting value or the state changes: send a data report according to Min Interval.</p>
-------------------------------------	--

Low Voltage Warning

Low Voltage	3.2V
-------------	------

5. Data Report

After power on, the device will immediately send a version packet report and a data report including the values of the soil moisture, soil temperature and soil electrical conductivity, and the voltage.

The device sends data according to the default configuration before any other configuring.

Default setting:

MaxTime: Max Interval = 3600s (60 min)

MinTime: MinTime configuration is not available.

*But the software has restriction, MinTime must be configured a number greater than 0.

Note:

1. ReportChange are not supported by R718PB15A. (Invalid configuration)
2. Data report will be based on ReportMaxTime period when sending data packet.
3. Report cycle is according to the configuration.
4. The data report is including the values of the soil moisture, soil temperature and soil electrical conductivity, and the voltage.
5. It would take about **20 seconds** for the sensor to process the collected value if you were to manually trigger the device by pressing the button, please be patient.
6. Please refer Netvox LoRaWAN Application Command document and Netvox Lora Command Resolver <http://cmddoc.netvoxcloud.com/cmddoc> to resolve uplink data.

Data report configuration and sending period are as following:

Description	Device	CmdID	Device Type	NetvoxPayLoadData		
ConfigReportReq	R718PB15A	0x01	0x58	MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)
ConfigReportRsp		0x81		Status (0x00_success)	Reserved (8Bytes, Fixed 0x00)	
ReadConfig ReportReq		0x02		Reserved (9Bytes, Fixed 0x00)		
ReadConfig ReportRsp		0x82		MinTime (2bytes Unit: s)	MaxTime (2bytes Unit: s)	Reserved (5Bytes, Fixed 0x00)

(1) Configure R718PB15A report parameters MaxTime = 1min

Downlink: 0158000A003C0000000000

Device Return:

81580000000000000000000000 (Configuration success)

81580100000000000000000000 (Configuration failure)


(2) Read device configuration parameters

Downlink: 025800000000000000000000

Device Return:

8258000A003C00000000000000 (current configuration)

6. Installation

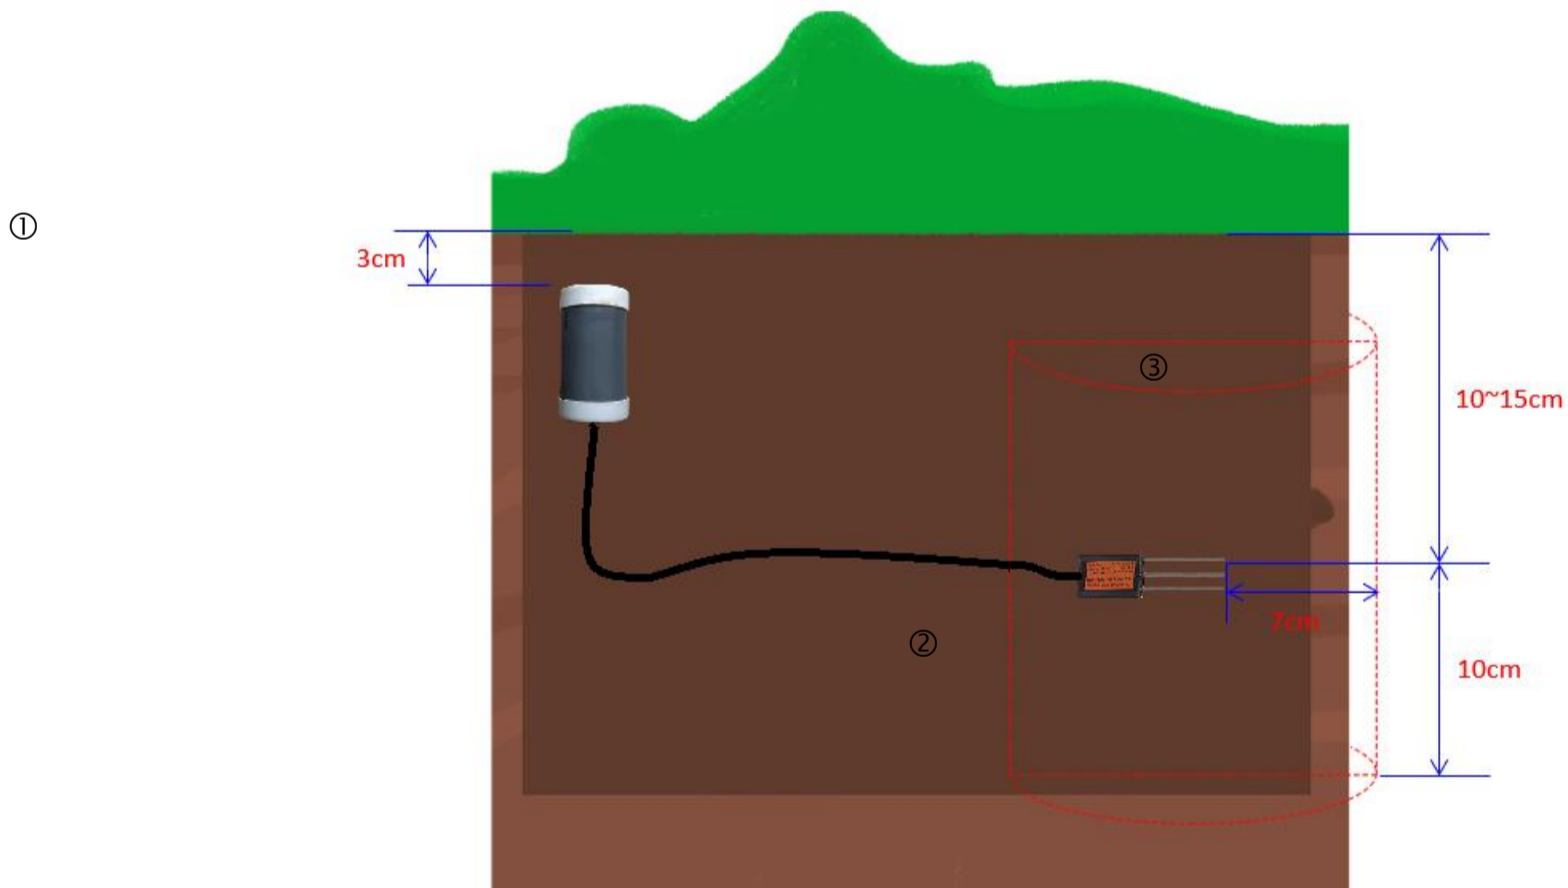

① The top of the waterproof box is about 3 cm away from the ground.

② The sensor monitors a cylinder with a radius of about 7 cm and a height of about 10 cm*2

③ Sensor is placed away from the ground 10~15 cm

Note: The above is the installation diagram. Please adjust the device according to the environment and pay attention to the main body of the device maintaining a good signal.

Method 1. Horizontal Installation

1. Excavate a hole or trench a few centimeters deeper than the depth at which the sensor is to be installed.
2. At the installation depth, shave off some soil from the vertical soil face exposing undisturbed soil.
3. Insert the sensor into the undisturbed soil face until the entire sensor is inserted. The tip of each prong has been sharpened to make it easier to push the sensor into the soil.
Be careful with the sharp tips.
4. Back fill the trench taking care to pack the soil back to natural bulk density around the sensor body of the soil sensor.

Method 2. Vertical Installation

1. Auger a 3-in hole to the depth at which the sensor is to be installed.
2. Insert the sensor into the undisturbed soil at the bottom of the auger hole using a hand or any other implement that will guide the sensor into the soil at the bottom of the hole. Many people have used a simple piece of PVC pipe with a notch cut in the end for the sensor to sit in, with the sensor cable routed inside the pipe.
3. After inserting the sensor, remove the installation device and backfill the hole taking care to pack the soil back to natural bulk density while not damaging the black overmolding of the sensor and the sensor cable in the process.

Cleaning and Maintenance

The EC measurement is extremely sensitive to the presence of nonconducting contamination on the screws, especially at high EC.

The most common source of contamination is skin oil from handling the screws with bare hands.

Use the following steps to clean the sensor:

1. Clean the screws using a mild detergent such as liquid dish soap and a nonabrasive sponge or cloth.
2. Rinse the sensor and screws thoroughly with tap or DI water.

Do not touch the screws without gloved hands and never contact the sensors with any source of oil or other nonconducting residue.

Note:

1. Avoid detergents that contain lotions or moisturizers.
2. Please do not disassemble the device unless it is required to replace the batteries.

Do not touch the waterproof gasket, LED indicator light, function keys when replacing the batteries. Please use suitable

screwdriver to tighten the screws (if using an electric screwdriver, it is recommended to set the torque as 4kgf) to ensure the device is impermeable.

7. Information about Battery Passivation

Many of Netvox devices are powered by 3.6V ER14505 Li-SOCl₂ (lithium-thionyl chloride) batteries that offer many advantages including low self-discharge rate and high energy density.

However, primary lithium batteries like Li-SOCl₂ batteries will form a passivation layer as a reaction between the lithium anode and thionyl chloride if they are in storage for a long time or if the storage temperature is too high. This lithium chloride layer prevents rapid self-discharge caused by continuous reaction between lithium and thionyl chloride, but battery passivation may also lead to voltage delay when the batteries are put into operation, and our devices may not work correctly in this situation.

As a result, please make sure to source batteries from reliable vendors, and it is suggested that if the storage period is more than one month from the date of battery production, all the batteries should be activated.

If encountering the situation of battery passivation, users can activate the battery to eliminate the battery hysteresis.

ER14505 Battery Passivation:

7.1 To determine whether a battery requires activation

Connect a new ER14505 battery to a resistor in parallel, and check the voltage of the circuit.

If the voltage is below 3.3V, it means the battery requires activation.

7.2 How to activate the battery

- a. Connect a battery to a resistor in parallel
- b. Keep the connection for 5~8 minutes
- c. The voltage of the circuit should be ≥ 3.3 , indicating successful activation.

Brand	Load Resistance	Activation Time	Activation Current
NHTONE	165 Ω	5 minutes	20mA
RAMWAY	67 Ω	8 minutes	50mA
EVE	67 Ω	8 minutes	50mA
SAFT	67 Ω	8 minutes	50mA

Note:

If you buy batteries from other than the above four manufacturers, then the battery activation time, activation current, and required load resistance shall be mainly subject to the announcement of each manufacturer.

8. Important Maintenance Instruction

Kindly pay attention to the following in order to achieve the best maintenance of the product:

- Keep the equipment dry. Rain, moisture and various liquids or water may contain minerals that can corrode electronic circuits. In case the device is wet, please dry it completely.
- Do not use or store in dusty or dirty areas. This way can damage its detachable parts and electronic components.
- Do not store in excessive heat place. High temperatures can shorten the life of electronic devices, destroy batteries, and deform or melt some plastic parts.
- Do not store in excessive cold place. Otherwise, when the temperature rises to normal temperature, moisture will form inside which will destroy the board.
- Do not throw, knock or shake the device. Treating equipment roughly can destroy internal circuit boards and delicate structures.
- Do not wash with strong chemicals, detergents or strong detergents.
- Do not paint the device. Smudges can make debris block detachable parts up and affect normal operation.
- Do not throw the battery into the fire to prevent the battery from exploding.

Damaged batteries may also explode.

All the above suggestions apply equally to your device, batteries and accessories.

If any device is not operating properly, please take it to the nearest authorized service facility for repairing.