


LoRaWAN™ Elster Absolute Encoder Communication Module

CM3010

1 ACM MODULE INSTALLATION

Install the module onto the encoder by connecting the connectors and fasten the screw (included on the back of the sensor).

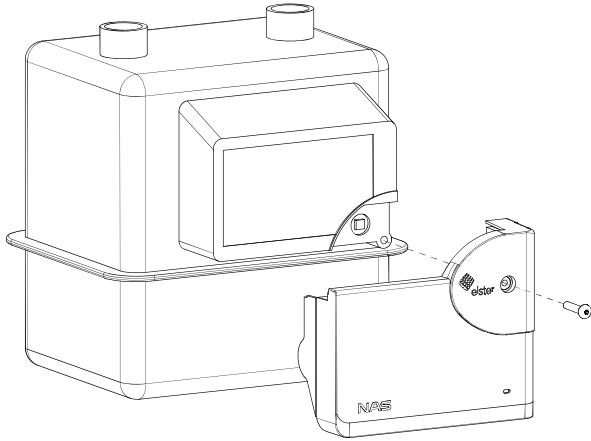

2 SWITCHING ON

Hold the magnet against the device (see illustration below) for at least 1 second.

- The sensor starts to initialize and the red light will flash (at least 5 seconds).
 - If the sensor failed to initialize the red light will stay on for 5 sec.
- Otherwise it will try to register to the network and the green light is flashing (at least 5 sec).
 - If it failed to join, the red light will stay on for 5 sec.
- If the network join was successful, the green light will stay on for 5 sec.

