

# Operating Manual

## EMS



## Important safety information



Read this manual before attempting to install the device!

Failure to observe recommendations included in this manual may be dangerous or cause a violation of the law. The manufacturer, Elektroniksystem i Umeå AB will not be held responsible for any loss or damage resulting from not following the instructions of this operating manual.

- The device must not be dismantled or modified in any way.
- The device is only intended for indoor use. Do not expose it to moisture.
- The device is not intended to be used as a reference sensor, and Elektroniksystem i Umeå AB will not be held liable for any damage which may result from inaccurate readings.
- The battery should be removed from the device if it is not to be used for an extended period. Otherwise, the battery might leak and damage the device. Never leave a discharged battery in the battery compartment.
- The device must never be subjected to shocks or impacts.
- To clean the device, wipe with a soft moistened cloth. Use another soft, dry cloth to wipe dry. Do not use any detergent or alcohol to clean the device.



Disposal note in accordance with ElektroG and WEEE Directive 2012/19/EU


The device, as well as all the individual parts, must not be disposed of with household waste or industrial waste. You are obliged to dispose of the device at the end of its service life in accordance with the requirements of ElektroG in order to protect the environment and to reduce waste through recycling. For additional information and how to carry out disposal, please contact the certified disposal service providers. The sensors contain a lithium battery, which must be disposed of separately.

## Contents

Important safety information .....	2
Description.....	4
Main features of EMS.....	5
Installation.....	6
Door activity sensor.....	7
Water leak sensor.....	7
Temperature/humidity sensor.....	7
Sensor configuration.....	8
NFC Configuration.....	8
Over the air configuration .....	8
Application parameters.....	8
Sensor behavior.....	9
NFC Read / Write .....	9
Sensor startup .....	10
Sampling mode / Periodic measurement .....	11
Opening activity (Reed switch) .....	11
Schedule Transmission.....	12
Water leak detector.....	12
Specifications .....	13
Sensor payload format.....	13
Regulations.....	14
Legal Notices .....	14
Declaration of conformity .....	14

## Description

EMS is a subtle indoor sensor with multiple purposes for LoRaWAN® wireless network. It measures temperature and humidity but can also be used as water leak detector, door activity sensor or acceleration detector. EMS is designed to be mounted on door frames, under desks, under dishwashers or in any other limited surface area. EMS is equipped with NFC (Near Field Communication) and can easily be configured from a smartphone.

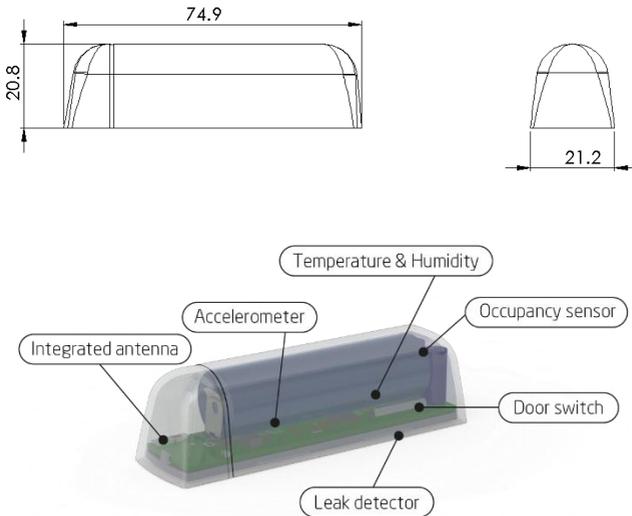

The barcode contains DevEUI and sensor type. This label is located at the back of your device.



## Main features of EMS

- Compatible with LoRaWAN® specification 1.0.3
- Measures ambient temperature
- Measures ambient humidity
- Detects acceleration
- Detects water leak
- Detects opening activity (Reed Switch)
- Easy installation
- Easy configuration
- May be installed on any flat surface
- Battery-powered
- Long-range communication
- Configurable over NFC
- Configurable over the air
- Ten years of battery life\*
- Supported channel plans: US902-928, EU863-870, AS923, AU915-928, KR920-923, RU864, IN865 & HK923
- CE Approved and RoHS compliant

*\*Depending on settings and environmental factors*

## Installation

1. Remove the back panel of the sensor with a small screwdriver.



2. Install the battery. The EMS requires one AA battery. The battery type is 3.6V Lithium Battery (ER14505).

*Caution: Using batteries other than the ones provided may result in loss of performance and battery life, and also damage to the device. Dispose of properly, observing environmental protection rules.*




3. Mount the back panel on the surface using the adhesive tape.
4. Attach the cover to the back panel.

## Door activity sensor

Make sure that the magnet part is mounted on the "door" (the part that is going to open) and the sensor part is mounted on the frame. For double doors, put one part on each door.

The distance between magnet and sensor should, if possible, not exceed 10mm. Make sure that the magnet and reed switch are mounted next to each other. Detection range will be affected by the materials of the door and frame, different materials result in different ranges. The reed switch is on the end of the sensor without the stripe. The magnet needs to face this side of the sensor (see image).

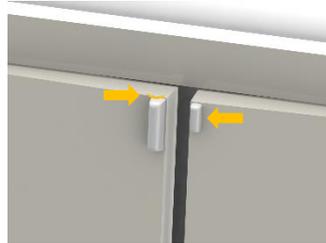

## Water leak sensor

Make sure that the back panel is mounted on the surface where the water may leak. The sensor element that detects the leak is placed on the back panel. For example, if EMS is going to monitor water leak from a dishwasher, place the back panel onto the floor under the machine.

## Temperature/humidity sensor

Place the device in an open space on a wall, under a desk or on any other flat surface. Make sure that the sensor is not faced by direct sunlight or placed near air vents or other places where it may measure values that is not representative for the rest of the room.

## Sensor configuration

All sensor settings can be configured via a smartphone application with NFC (Near Field Communication) or over the air via the network server and downlink data to the sensor. The sampling rate, spreading factor, encryption keys, port, and modes can be changed. All sensor settings can be locked from the server or NFC to make end-users unable to read or change settings on the sensor.

### NFC Configuration

1. Download ELSYS "Sensor Settings" application from Google Play and install it on a smartphone or tablet. The device must support NFC.
2. Enable NFC on the device and start the application.
3. Place your device on top of the EMS sensor to connect with the NFC antenna. *You may need to remove the top cover and battery to get connection.*
4. Remove the device. Current settings will be displayed in the application.
5. Use the application to change any settings if needed.
6. Quickly tap the device on top of the EMS to give the new settings to the sensor. Make sure that the application confirms your new settings.
7. Wait for the sensor to reboot (5 sec), indicated by the LED flashing. Sensor settings have been updated.

See the section "Help" in the application for more information.

### Over the air configuration

All settings may be configured over the air via your LoRaWAN® infrastructure. Please visit the support section on our webpage for more information regarding downlink protocol.


### Application parameters

All parameters for the "Sensor settings" application can be found in our settings document. Please visit the support section on our webpage for more information.

## Sensor behavior

### NFC Read / Write


1. When reading or writing NFC configuration data to the sensor, it starts a timer and delays its action 5 seconds.
2. After the delay, the sensor determines if the NFC data has changed or not. If the data has changed, the sensor reboots and starts from power-up.
3. Write your settings in the application and then locate the NFC antenna of the phone and sensor. Keep the two devices close and don't move them to get the best connectivity as possible when writing or reading data to the sensor. Bad connection can be caused by long distance, wrong location, or rapid movement.
4. When you have written data to the sensor, let the sensor reboot and restart before trying to write again.

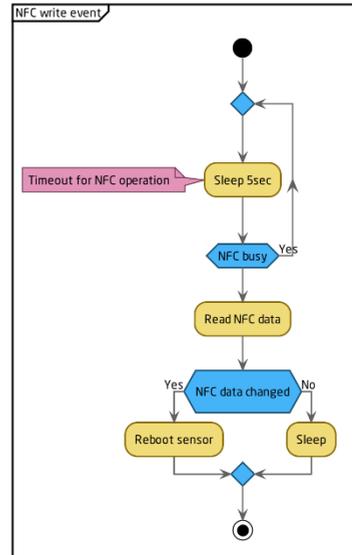

You should always validate your settings by reading the NFC data after the sensor has restarted.


## Sensor startup

1. When the sensor starts up, it loads configuration from the internal memory and merges it with user configuration.
2. When the configuration is done, the sensor writes the new settings to the NFC chip. The sensor always writes new configurations to the NFC chip when something changes in the sensor or if NFC data is corrupted by an NFC writer or phone. The sensor always writes the new configuration to NFC chip at startup.
3. When the configuration is done, the sensor tries to join the network if OTAA (Over the Air Activation) is enabled.
4. The sensor LED flashes orange when it tries to join a network. It will try to join every 10 seconds initially. This interval will increase to save battery, at most up to one time per hour.
5. After successful connection to a network, the sensor sends a settings packet and enters sampling mode.

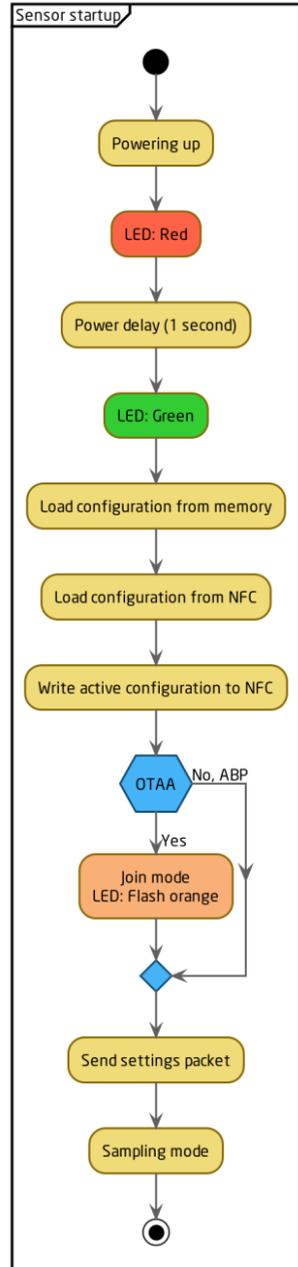

### Sampling mode / Periodic measurement

The sensor makes periodic measurements according to the user configurations.

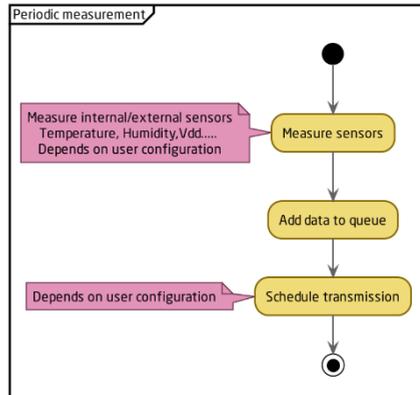


### Opening activity (Reed switch)

When the reed switch changes state from closed to open, the activity is added to a pulse counter that keeps track of the number of opening events. The number of the pulse counter and the current state is added to the data packet.

If the state is changed from closed to open, the pulse counter remains unchanged and only the state and current number of counts is added to the data packet.


After values has been added to the packet, the EMS schedules a transmission.

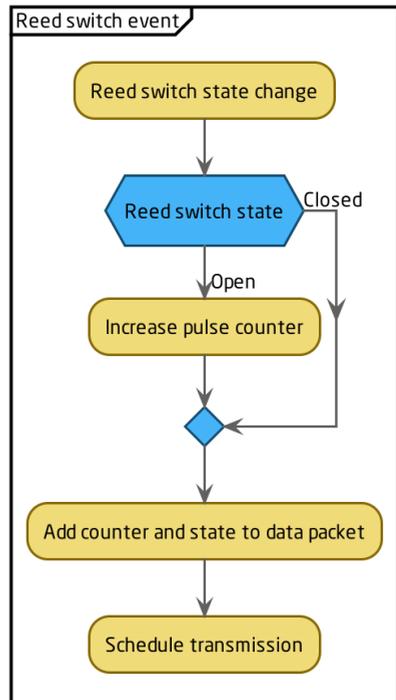

## Schedule Transmission

The sensor transmits the data according to the user configurations.

*Note: The configured sending interval can be overridden by network limitations. Due to this, the spreading factor and sending interval settings might result in longer intervals than intended.*

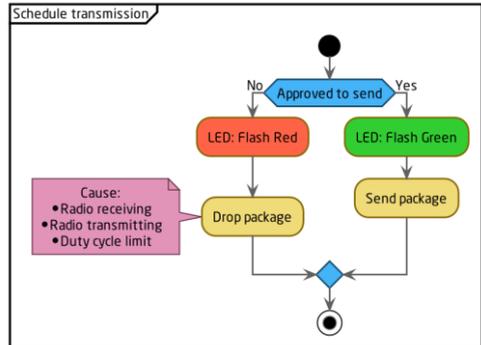

## Water leak detector

The EMS has probes mounted through the back panel which are constantly monitored by the sensor. The sensor can be configured to send alarm immediately when water is detected. Detection is sent periodically. Value is 0 for dry conditions and 1 when water is detected.

## Specifications

### Sensor payload format

The device uses the standard ELSYS payload format. Please see the specified document on our webpage.

Power supply:	3.6V DC
Battery type:	AA 14505 (Li-SOCl <sub>2</sub> )
EU directives compliance:	RoHS 2011/65/EU WEEE 2012/19/EU
Radio protocol:	LoRaWAN®
Radio frequency band:	US902-928, EU863-870, AS923, AU915-928, KR920-923, RU864, IN865 & HK923
Range:	8 km*
Operating conditions	0 to 50 °C 0 to 85 % RH (non-condensing)
Temperature range	0 – 40 °C
Temperature resolution	0.1 °C
Temperature accuracy	± 0.2 °C
Humidity range	0 – 100 %
Humidity resolution	0.1 % RH
Humidity accuracy	± 2 % RH
Accelerometer detection level	Configurable via NFC and downlink conf.
Water leak detector range	0 – 100 % (Represented by numbers 0 – 254)
Dimensions	21.2 x 74.9 x 21.8 mm
Battery life	Up to 10 years**

*\*Measured with settings: SF10, 868 Mhz. The range can be greater or less, depending on terrain and building structure.*

*\*\*Depending on settings and environmental factors.*

## Regulations

### Legal Notices

All information, including, but not limited to, information regarding the features, functionality, and/or other product specification, are subject to change without notice. ELSYS reserves all rights to revise or update its products, software, or documentation without any obligation to notify any individual or entity. ELSYS and ELSYS logo are trademarks of Elektroniksystem i Umeå AB. All other brands and product names referred to herein are trademarks of their respective holders.

### Declaration of conformity

Hereby, Elektroniksystem i Umeå AB declares that EMS complies with the essential requirements and other relevant provisions of Directive 2014/30/EU and 2014/53/EU.