



LDS01 – LoRaWAN Door Sensor User Manual

Document Version: 1.3.0

Image Version: v1.3

Version	Description	Date
1.0	Release	2020-Feb-1
1.2	Add update for firmware v1.2	2020-Aug-1
1.3.0	Add update for firmware v1.3, new feature Alarm base on time out	2020-Nov-28

1. Introduction.....	3
1.1 What is LDS01 LoRaWAN Door Sensor	3
1.2 Features.....	4
1.3 Applications.....	4
1.4 Dimension.....	4
1.5 Firmware Change log	4
2. Power ON LDS01	5
3. How to install LDS01	6
4. Operation Mode	7
4.1 How it works?.....	7
4.2 Example to join LoRaWAN network.....	7
4.3 Uplink Payload.....	9
4.4 Downlink Payload.....	9
4.5 Integrate with Mydevice.....	11
4.6 Alarm Base on Timeout	13
4.7 LEDs.....	14
4.8 Battery.....	14
5. Use AT Command.....	15
5.1 Access AT Command.....	15
6. FAQ.....	16
6.1 How to upgrade the image?.....	16
6.2 How to change the LoRa Frequency Bands/Region?	16
6.3 Can I disable uplink for each event to save battery life?	16
7. Order Info	17
8. Packing Info	17
9. Support.....	17

1. Introduction

1.1 What is LDS01 LoRaWAN Door Sensor


The Dragino LDS01 is a LoRaWAN Door Sensor. It detects door open/close status and uplink to LoRaWAN network. The LDS01 is small sensor; the dimension is as small as 64 x 30 x 14 mm.

LDS01 is powered by a CR2032 coin battery, in a good LoRaWAN Network Coverage case, it can transmit as many as 12,000 uplink packets (base on SF7, 14dB). in poor LoRaWAN network coverage, it can transmit ~ 1,300 uplink packets (base on SF10, 18dB). The design goal for one battery is up to 1 year. User can easily change the CR2032 battery for reuse.

The LDS01 will send periodically data every day as well as for each door open/close action. It also counts the door open times and calculate last door open duration.

Each LDS01 is pre-loaded with a set of unique keys for LoRaWAN registrations, register these keys to local LoRaWAN server and it will auto connect after power on.

LDS01 in a LoRaWAN Network

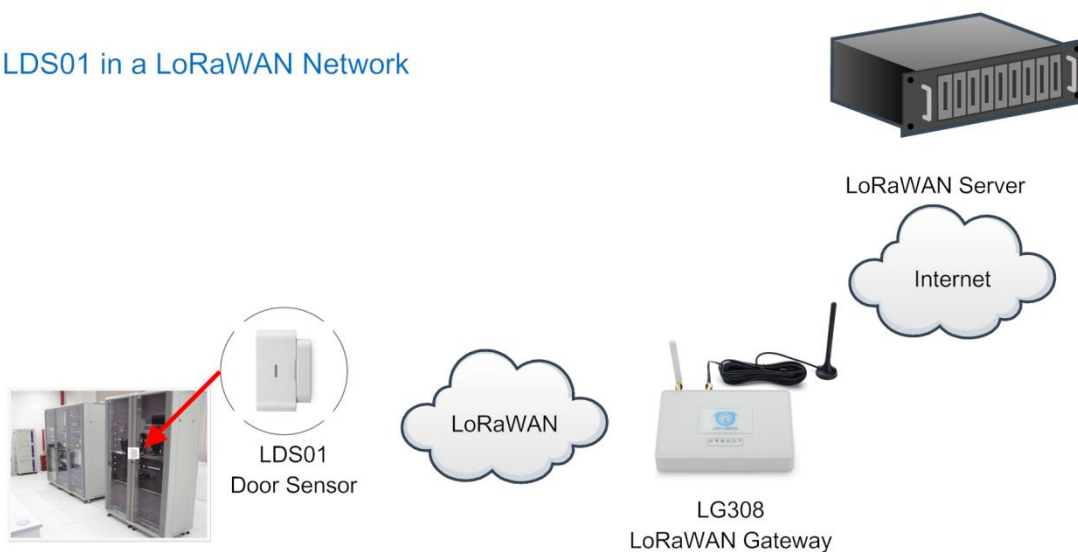

1.2 Features

- ✓ LoRaWAN Class A v1.0.3
- ✓ Frequency Bands: CN470/EU433/KR920/US915/EU868/AS923/AU915/IN865/RU864
- ✓ SX1262 LoRa Core
- ✓ Door Open/Close detect
- ✓ Door open/close statistics
- ✓ CR2032 battery powered
- ✓ AT Commands to change parameters
- ✓ Uplink on periodically and open/close action
- ✓ Remote configure parameters via LoRa Downlink
- ✓ Firmware upgradable via program port

1.3 Applications

- ✓ Smart Buildings & Home Automation
- ✓ Logistics and Supply Chain Management
- ✓ Smart Metering
- ✓ Smart Agriculture
- ✓ Smart Cities
- ✓ Smart Factory

1.4 Dimension




1.5 Firmware Change log

[LDS01 Image files – Download link](#)

2. Power ON LDS01

When receive the LDS01, please open the enclosure and remove the isolated paper and **PRESS** **RESET** so the coin battery can power on the device and device runs on low power mode. The [LED](#) will blink when devices is powered.

3. How to install LDS01

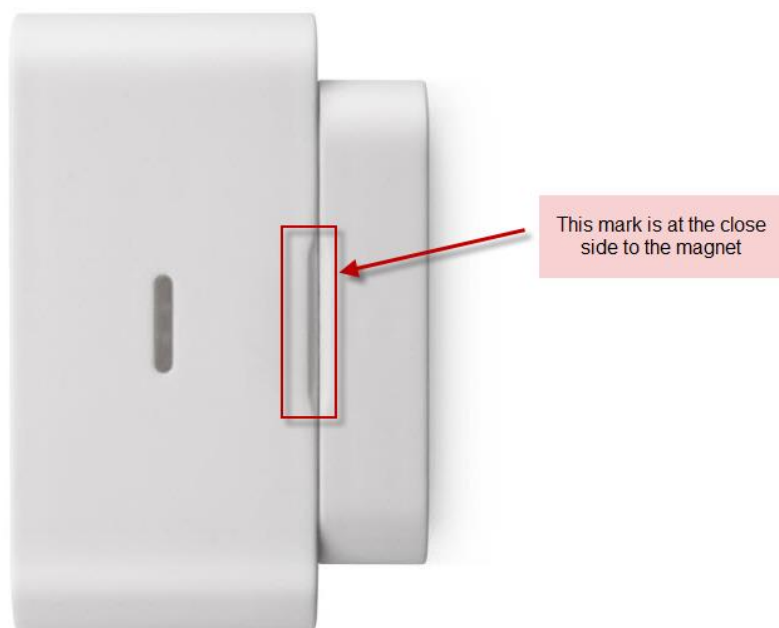

4. Operation Mode

4.1 How it works?

The LDS01 is configured as LoRaWAN OTAA Class A mode by default. It has OTAA keys to join network. To connect a local LoRaWAN network, user just need to input the OTAA keys in the network server and [power on](#) the LDS01. It will auto join the network via OTAA.

In case user can't set the OTAA keys in the network server and has to use the existing keys from server. User can [use AT Command](#) to set the keys in the devices.

4.2 Example to join LoRaWAN network

Here shows an example for how to join the TTN Network. Below is the network structure, we use our LG308 as LoRaWAN gateway here.



The LDS01 is installed on the door edge to detect the open / close event. And send the status to LoRaWAN server. The LDS01 will uplink two type of messages to the server.

- ✓ A keep-alive message which send once per day.
- ✓ A door event message when there is a door open/close. ([Alarm event can be disabled](#))


The LG308 is already set to connect to [TTN network](#). So what we need to now is only configure the TTN:

Step 1: Create a device in TTN with the OTAA keys from LDS01.


Each LDS01 is shipped with a sticker with unique device EUI:




User can enter this key in their LoRaWAN Server portal. Below is TTN screen shot:
Add APP EUI in the application.

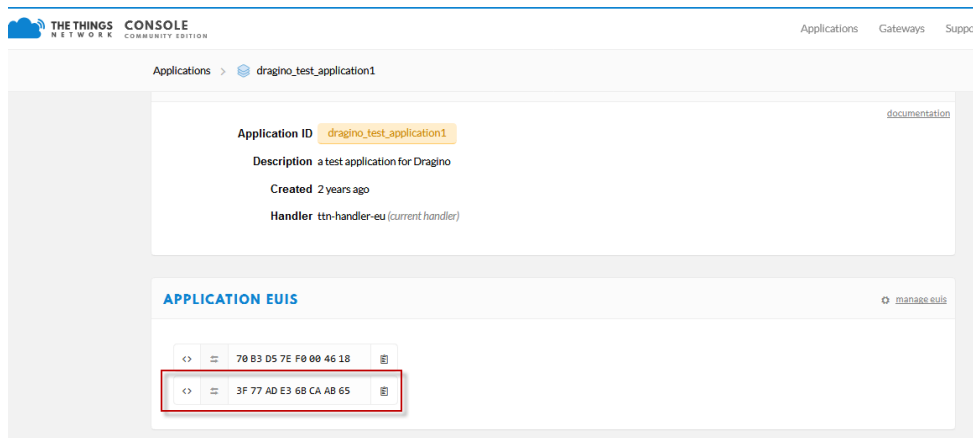

Add APP KEY and DEV EUI

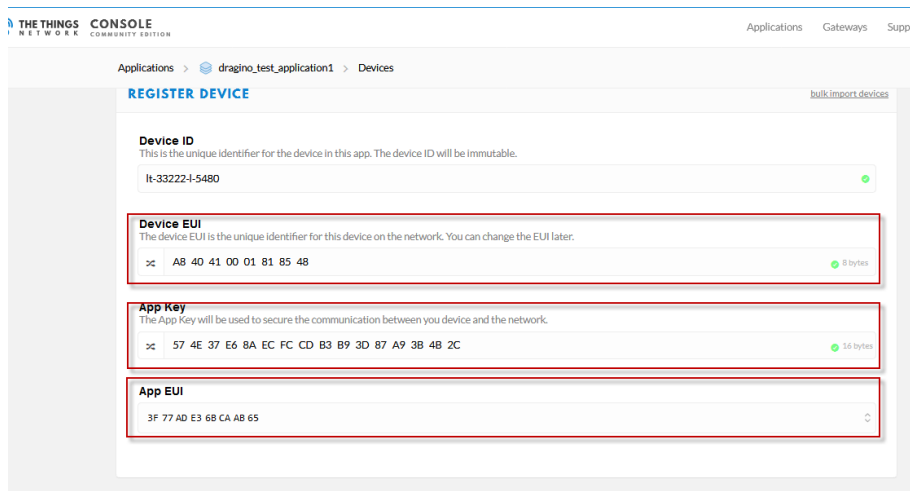

Step 2: [Power on](#) LDS01 and it will auto join to the TTN network. After join success, it will start to upload message to TTN and user can see in the panel.

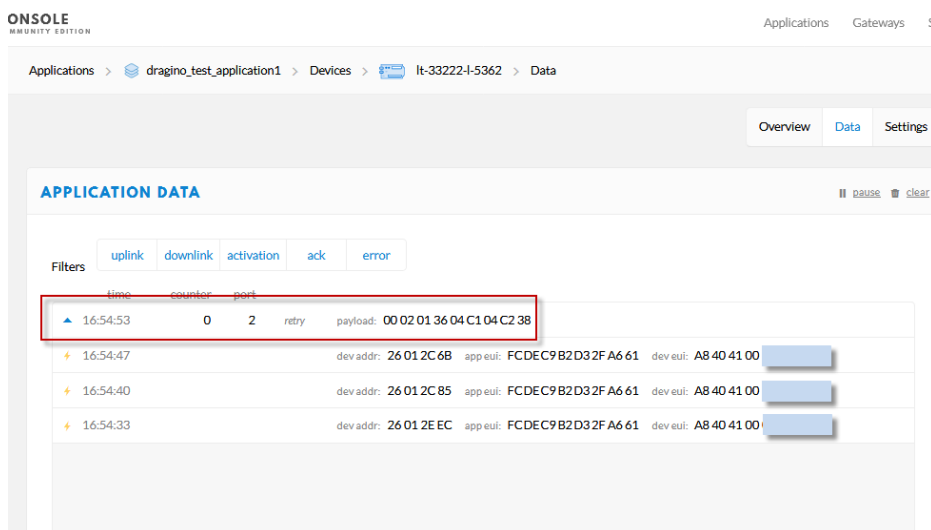


4.3 Uplink Payload

Uplink Payload total 10 bytes. Note: Alarm bit is added since firmware version v1.3

Size(bytes)	2	1	3	3	1
value	Status&BAT	MOD Always:0x01	Total open door events	Last door open duration (unit: min)	Alarm

Example:

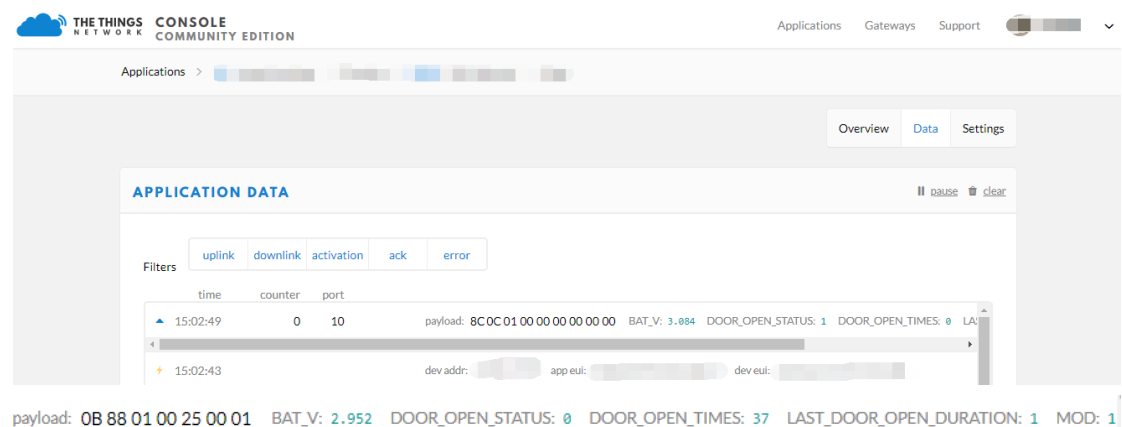

Example Payload Decoder in TTN:

http://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/LDS01/Payload/

4.4 Downlink Payload

Downlink Control Type	Type Code	Downlink payload size(bytes)
TDC (Transmit Time Interval—Keep Alive Interval)	0x01	4
RESET	0x04	2
Set confirmed mode	0x05	2
Clear Counting	0xA6	2
Enable/Disable Alarm	0xA7	2
Control ADR/DR	0xA8	3
Set Alarm Timeout	0xA9	4

Example Downlink payload setting in TTN:

DOWNLINK

Scheduling

replace

first

last

FPort

2

☐ Confirmed

Payload

bytes

fields

01 00 00 3C

4 bytes

Type Code 0x01

If the payload=0100003C, means to control the LDS01's Keep Alive interval to 0x00003C=60(S)

Type Code 0x04

If payload = 0x04FF, it will reset the LDS01.

Type Code 0x05(Since firmware v1.2)

0x05 00: Set uplink to LoRaWAN unconfirmed mode

0x05 01: Set uplink to LoRaWAN confirmed mode

Type Code 0xA6

Example: 0xA601: Clear Counting

For LDS01: reset both count number and time.

Type Code 0xA7 (Since firmware v1.2)

0xA7 01 : Equal to AT+DISALARM=1

0xA7 00 : Equal to AT+DISALARM=0

Type Code 0xA8 (Since firmware v1.2)

Format: 0xA8 aa bb

aa: 1: Enable ADR; 0: Disable ADR (Same as AT+CADR command)

bb: set DR (Same as AT+CDATARATE ,only valid after ADR=0)

Example: 0x A8 00 02 : Set ADR=0 and DR=1

Type Code 0xA9 (Since firmware v1.3)



See [Alarm Base Timeout](#) for detail.

4.5 Integrate with Mydevice

Mydevices provides a human friendly interface to show the sensor data, once we have data in TTN, we can use Mydevices to connect to TTN and see the data in Mydevices. Below are the steps:


Step 1: Be sure that your device is programmed and properly connected to the network at this time.

Step 2: To configure the Application to forward data to Mydevices you will need to add integration. To add the Mydevices integration, perform the following steps:

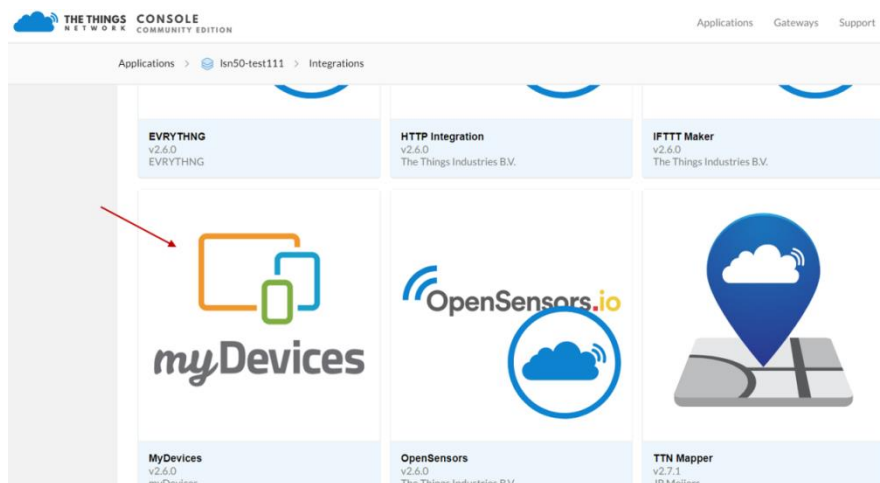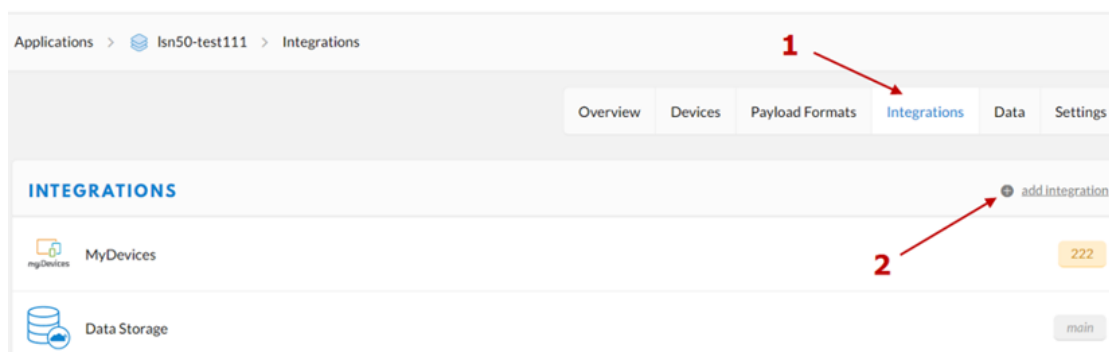

Applications > Isn50-test111 > Integrations

ADD INTEGRATION



MyDevices (v2.6.0)
myDevices
Quickly design, prototype and commercialize IoT solutions with myDevices Cayenne
[documentation](#)

Process ID
The unique identifier of the new integration process

Isn50

Access Key
The access key used for downlink

default key [devices](#) [messages](#)

Cancel **Add Integration**

Step 3: Create an account or log in Mydevices.

Step 4: Search LDS01 and add DevEUI.


Cayenne **+ Create new project** [Create App](#) [Submit Project](#) [Community](#) [Docs](#) [User Menu](#)


Add new...
Device/Widget
Event
Trigger
Project


Device 21fe
Device 5517
Device 64db
Device Bada
Device ec95
Dragino LDS01 LoRaW...
Location
Dragino LGT92 v1.5
Dragino LHT65
Dragino LSN50 v1.6+ L...
Dragino LSN50 v1.6+ L...
Dragino LSN50 v1.6+ L...
Dragino LSN50 v1.6+ L...
Dragino LT-22222-L L...
Dragino Technology Co...

Devices & Widgets
LDS01

DEVICES
Single Board Computers
MicroControllers
Sensors
Actuators
Extensions
LoRa


Dragino LDS01 LoRaWAN Door Sensor
LoRaWAN Door Sensor

Enter Settings

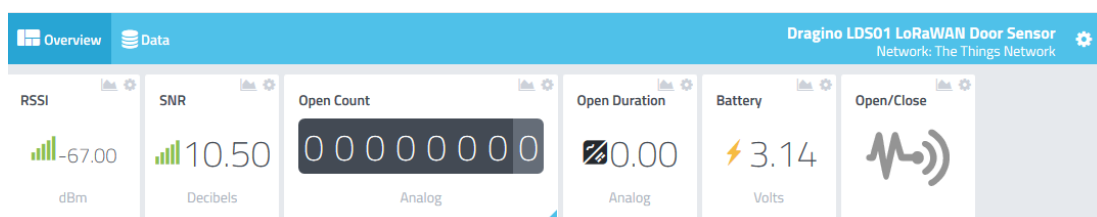Dragino Technology Co.Ltd LDS01 LoRaWAN Door Sensor
Name
Dragino LDS01 LoRaWAN Door Sensor
DevEUI
Activation Mode
Already Registered
Tracking
Location
This device doesn't move
Address
Add device



4.6 Alarm Base on Timeout

Since firmware v1.3, LDS01 can monitor the timeout for a status change, this feature can be used to monitor some event such as open fridge too long etc.

User configure this feature by using:

AT Command to configure:

- AT+TTRIG=1,30 → When status change from close to open, and device keep in open status for more than 30 seconds. LDS01 will send an uplink packet, the Alarm bit (the lowest bit of 10th byte of payload) on this uplink packet is set to 1.
- AT+TTRIG=1,30 → When status change from close to open, and device keep in open status for more than 30 seconds. LDS01 will send an uplink packet, the Alarm bit (the lowest bit of 10th byte of payload) on this uplink packet is set to 1.
- AT+TTIG=0,0 → Default Value, disable timeout Alarm.

Downlink Command to configure:

Command: 0xA9 aa bb cc

A9: Command Type Code

aa: status to be monitor

bb cc: timeout.

If user send 0xA9 01 00 1E: equal to AT+TTRIG=1,30

Or

0xA9 00 00 00: Equal to AT+TTRIG=0,0. Disable timeout Alarm.

4.7 LEDs

Action	LED behavior
Power On	GREEN on 1s, RED on 1s, BLUE on 1s
Joined successful	GREEN LED on 5s
Send an uplink message	GREEN LED blinks once
Got a downlink message	BLUE LED blinks once

4.8 Battery

LDS01 is powered by a CR2032 coin battery, when running in deep sleep mode, the device power consumption is ~5uA.

The main power consumption is transmitting an uplink message. Depends on LoRaWAN network signal strength, the device can send different number of uplink messages.

1. In poor network coverage and US915 band. The device will transmit at SF10 at max power. in this case, it can uplink about ~1,300 messages.
2. In good network coverage and EU868 band, the device will transmit at SF7, and can uplink as many as 12,000 messages.

When battery voltage is below 2.75v, the LDS01 can't send uplink message.

Note: It is recommended to change battery when it reaches 2.8v. After change the battery, make sure to **PRESS RESET** button to active the low power mode.


Below shows the battery placement:



5. Use AT Command

5.1 Access AT Command

LDS01 supports AT Command set. User can use a USB to TTL adapter to configure LDS01 via use AT command, as below.

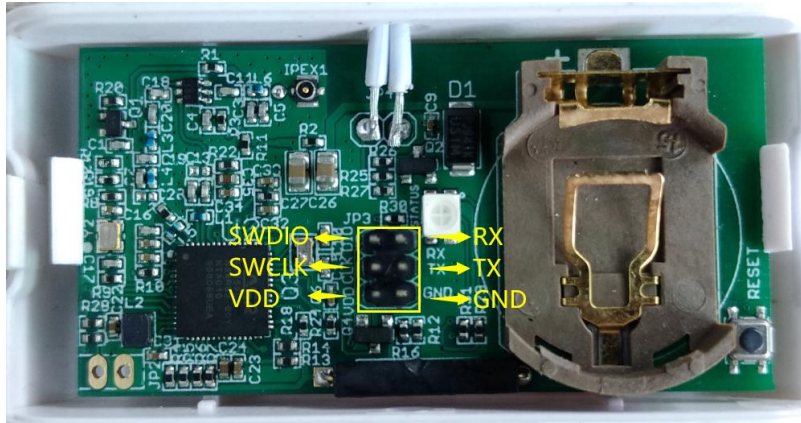

USB to TTL <- -> LDS01


RX <- -> TX

TX <- -> RX

GND <- -> GND

In PC, User needs to set [serial tool](#)(such as [putty](#), SecureCRT) baud rate to **115200** to access to access serial console of LWL01. Below is the output for reference:

The AT Access password is **123456**.

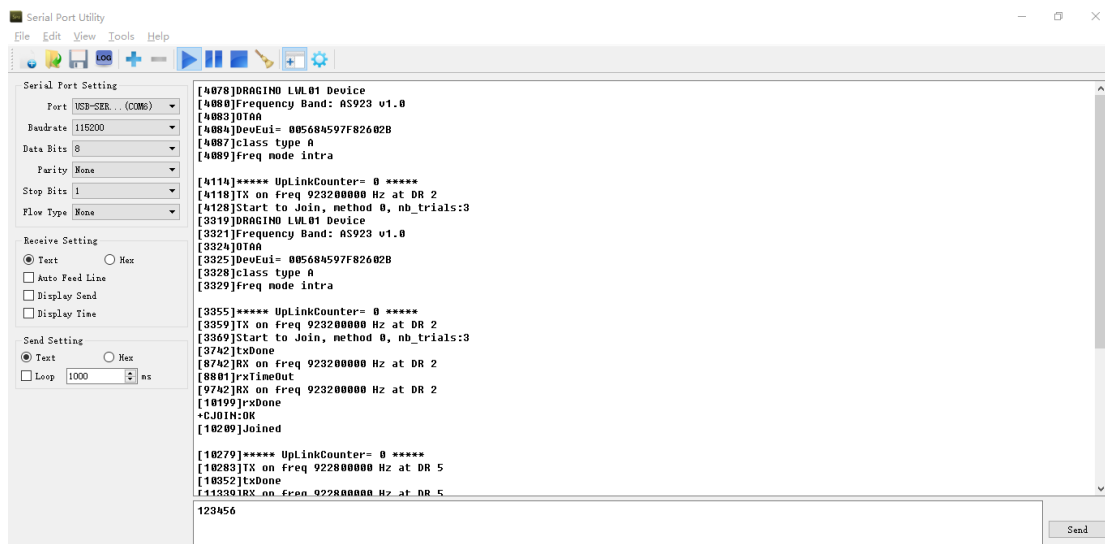

Each AT Command need to **add an ENTER** at the end before send.

When entering the first command, the **RED LED** will on and user can now input AT Commands. After input all needed AT Commands, Please input AT+CLPM=1 to set the device to work in Low Power mode and **RED LED** will be off.

More detail AT Command manual can be found at [AT Command Manual](#)

6. FAQ

6.1 How to upgrade the image?

User can upgrade the firmware of LWL01 for bug fix, new features, or change working region. The upgrade instruction are here:

[http://wiki.dragino.com/index.php?title=Firmware Upgrade Instruction](http://wiki.dragino.com/index.php?title=Firmware_Upgrade_Instruction)

6.2 How to change the LoRa Frequency Bands/Region?

User can follow the introduction for [how to upgrade image](#). When download the images, choose the required image file for download.

6.3 Can I disable uplink for each event to save battery life?

Yes, since firmware version v1.2, this feature is supported, User can use below method to disable this:

via AT Command:

AT+DISALARM=1, End node will only send packet in TDC time.

AT+DISALARM=0, End node will send packet in TDC time or status change for door sensor.

via LoRaWAN downlink Command:

0xA701 : Equal to AT+DISALARM=1

0xA700 : Equal to AT+DISALARM=0

7. Order Info

Part Number: LDS01-XXX

XXX:

- **EU433**: frequency bands EU433
- **EU868**: frequency bands EU868
- **KR920**: frequency bands KR920
- **CN470**: frequency bands CN470
- **AS923**: frequency bands AS923
- **AU915**: frequency bands AU915
- **US915**: frequency bands US915
- **IN865**: frequency bands IN865
- **CN779**: frequency bands CN779

8. Packing Info

Package Includes:

- ✓ LDS01 x 1

Dimension and weight:

- ✓ Device Size: 64 x 30 x 14 mm

9. Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different timezones we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to

support@dragino.com